

# QUICK START GUIDE

---

BDS-8W(-1), BDS-8THA(-1), BDS-8FHA(-1)

# BDS TEMPERATURE KIOSK

---

24/7 TECHNICAL SUPPORT AT 1.877.877.2269 OR VISIT [BLACKBOX.COM](http://BLACKBOX.COM)



# TABLE OF CONTENTS

<b>CONTENTS</b>	
<b>STEP 1. CONNECT THE GATE .....</b>	<b>3</b>
<b>STEP 2: REVIEW THE PORTS DEFINITION.....</b>	<b>3</b>
2.1 WIRE INTERFACE DEFINITION VERSION 1.....	3
2.2 WIRE INTERFACE DEFINITION VERSION 2.....	4
<b>STEP 3. APP INSTRUCTIONS.....</b>	<b>5</b>
3.1 ENTER THE SETTING INTERFACE.....	5
3.2 APPLICATION SETTINGS .....	6
3.3 FACE IMAGE ACQUISITION.....	7
3.4 APPLICATION INFORMATION: VIEW THE BASIC INFORMATION OF THE DEVICE.....	8
3.5 PASS RECORD .....	9
3.6 FACE LIBRARY: INFORMATION OF FACE.....	10
<b>A.1 DISCLAIMER.....</b>	<b>11</b>
<b>A.2 TRADEMARKS USED IN THIS MANUAL .....</b>	<b>11</b>



# INSTALLATION STEPS

This quick start guide explains how to install the BDS Temperature Kiosk. Follow the steps listed next.

NOTE: The BDS Management software is named EZ-Pass in the software screens you will see.

## STEP 1. CONNECT THE GATE

Connect the tablet relay cable to the door open button terminal of the gate control board. If the door opening action is reversed, reverse the line order.

- ◆ If there is no response, set in the BDS (EZ-Pass) app as follows:
- ◆ Mode 0: Indicates non-automatic closing mode. The relay will not close automatically after opening the relay.
- ◆ Mode 1: Represents the auto-closing mode (active high-default low level, then high level for X seconds, last low level). The relay will automatically close after a delay of X seconds after opening the relay.
- ◆ Mode 2: Represents the auto-closing mode (active low-default low, then high for X seconds, and finally low). The relay will automatically close after a delay of X seconds after opening the relay.

## STEP 2: REVIEW THE PORTS DEFINITION

### 2.1 WIRE INTERFACE DEFINITION VERSION 1

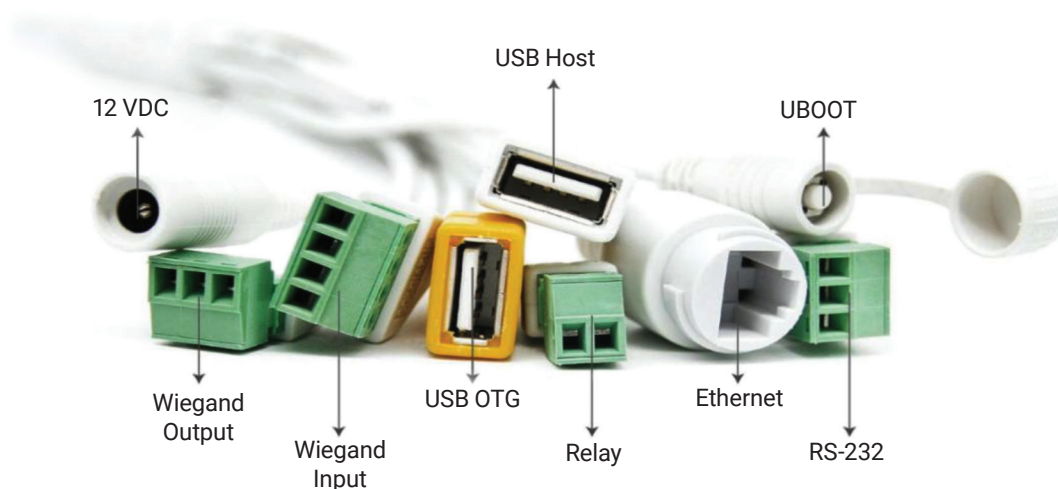 


FIGURE 1.

TABLE 1. DELAY

PIN NUMBER	TERMINAL ELECTRICAL DEFINITION
1	COM
2	NO

# INSTALLATION STEPS

**TABLE 2. WIEGAND INPUT**

PIN NUMBER	TERMINAL ELECTRICAL DEFINITION
1	D0_IN
2	D1_IN
3	12V
4	GND

**TABLE 3. WIEGAND OUTPUT**

PIN NUMBER	TERMINAL ELECTRICAL DEFINITION
1	D0_OUT
2	D1_OUT
3	GND

**TABLE 4. RS-232**

PIN NUMBER	TERMINAL ELECTRICAL DEFINITION
1	232_RX1
2	232_TX1
3	GND

## 2.2 WIRE INTERFACE DEFINITION VERSION 2

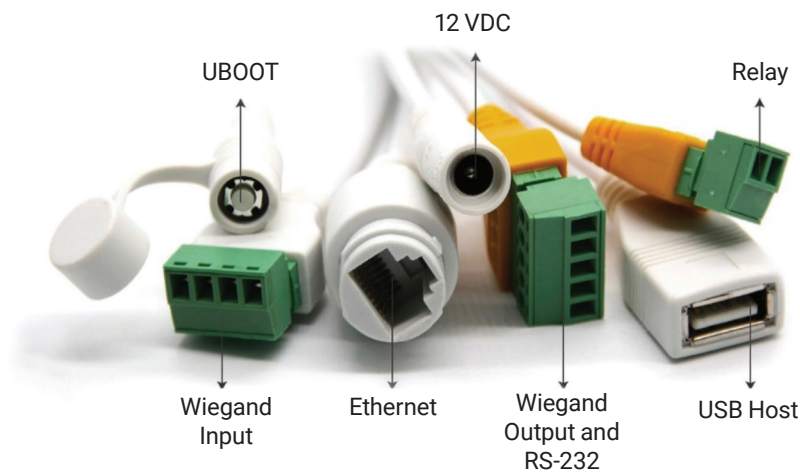 


FIGURE 2.

# INSTALLATION STEPS

## STEP 3. APP INSTRUCTIONS

How to install the app:

The BDS Management (EZ-Pass) software install U disk has two modes: installation mode and update mode.

- ◆ Installation Mode: The filename is EZ-Pass.apk This file can be automatically installed by putting it in the root directory of a USB flash drive.
- ◆ Update Mode: The filename the apk EZ-Pass.apk under the "resource" folder.

You can use the U disk to automatically update the installation package.

You can also connect the mouse and U disk at the same time, select the file on the resource manager and click install.

### 3.1 ENTER THE SETTING INTERFACE

Connect a mouse. Press the Middle mouse button and enter the password 123456 to enter the setting interface. (The right mouse button is used to exit on an Android device.)

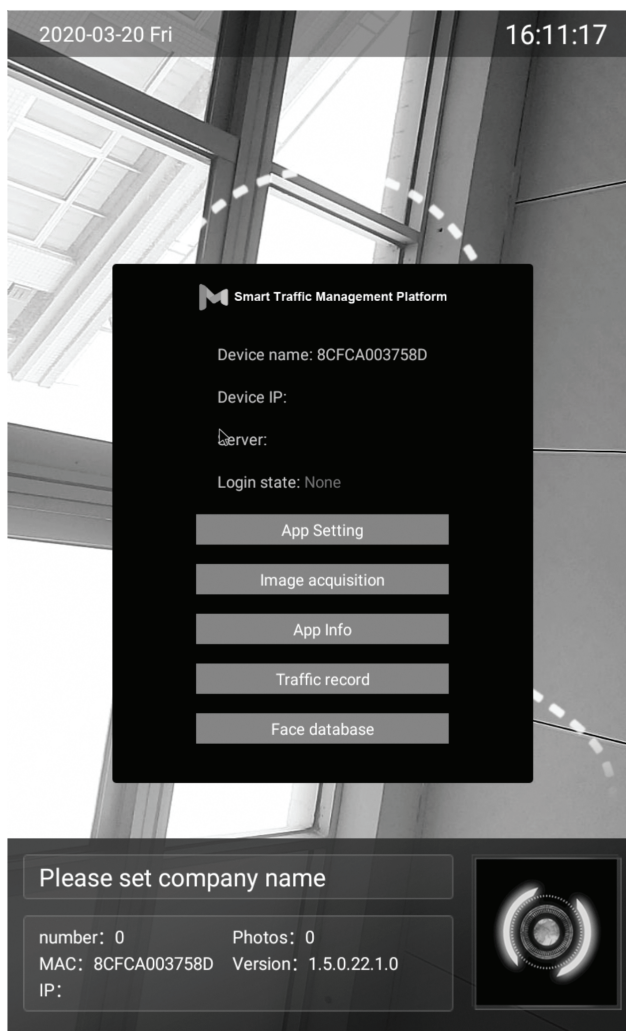 


FIGURE 3.

# INSTALLATION STEPS

## 3.2 APPLICATION SETTINGS

1. Device name setting: Set the device name.
2. Body temperature setting: Body temperature detection, body temperature alarm, mask detection function switch on and body temperature threshold.
3. Recognition parameter setting: The lower the threshold, the higher the recognition accuracy, the more the recognition times, the slower the stranger is reported.
4. Volume setting: Set the volume.
5. Startup settings: Auto-start after booting, and the application will automatically start after exiting.
6. Identification effect display: Setting of the LED light, green light for success (settable display image name), red light for failure, fill light.
7. Apply password setting: Set password, initial password is 123456
8. Camera preview resolution setting: Set the resolution.
9. Screen saver brightness setting: Set brightness.
10. Device restart time setting: Setting of the device restart time.
11. Relay mode.(See Step 1, Connect the gate.)
12. Application initialization: restore the initial application settings.

 
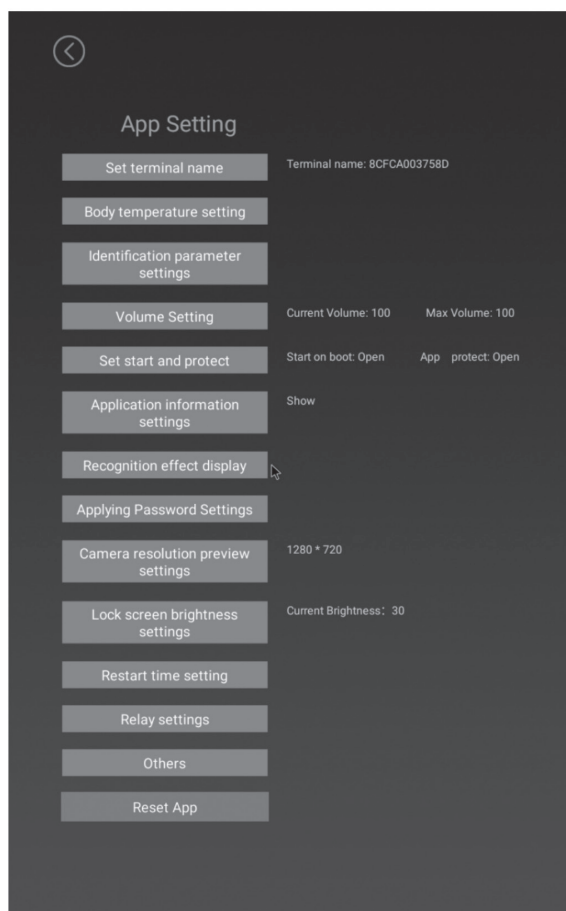 


FIGURE 4.

## 3.3 FACE IMAGE ACQUISITION

---

Enter face

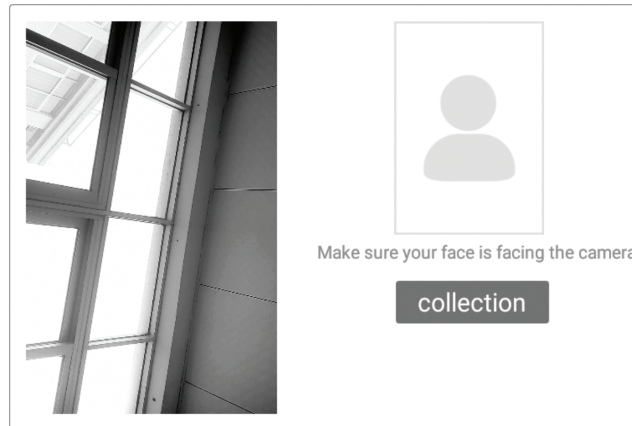

ID

Please enter ID

name

Please enter your name

sex

man woman

Save

Cancel

FIGURE 5.

Enter face.

## 3.4 APPLICATION INFORMATION: VIEW THE BASIC INFORMATION OF THE DEVICE

---

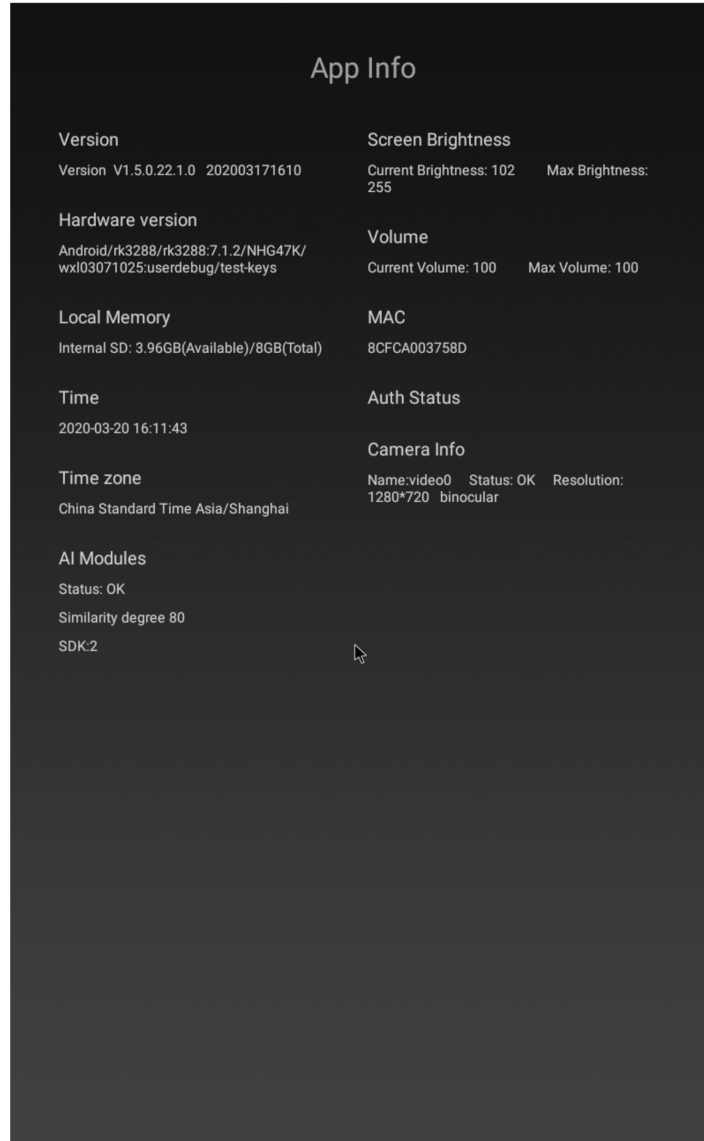 


FIGURE 6.



## 3.5 PASS RECORD

---

Save and view the information of a pedestrian's face and temperature, can be exported with U disk.

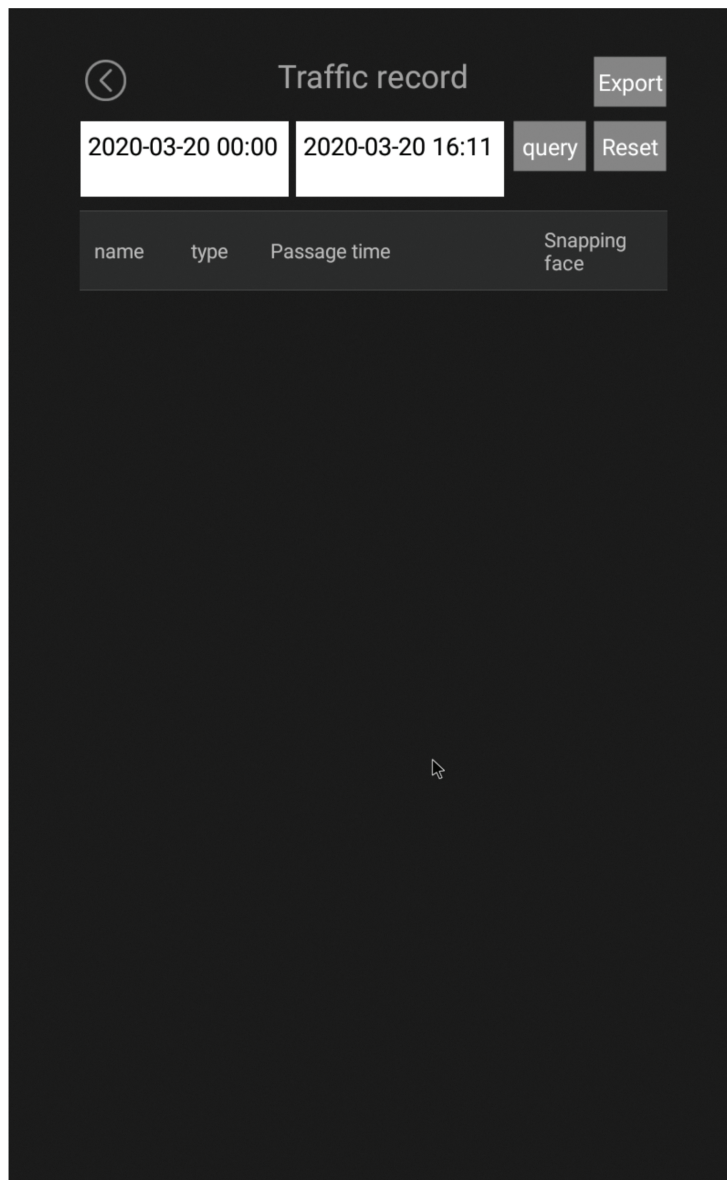 


FIGURE 7.

## 3.6 FACE LIBRARY: INFORMATION OF FACE

---

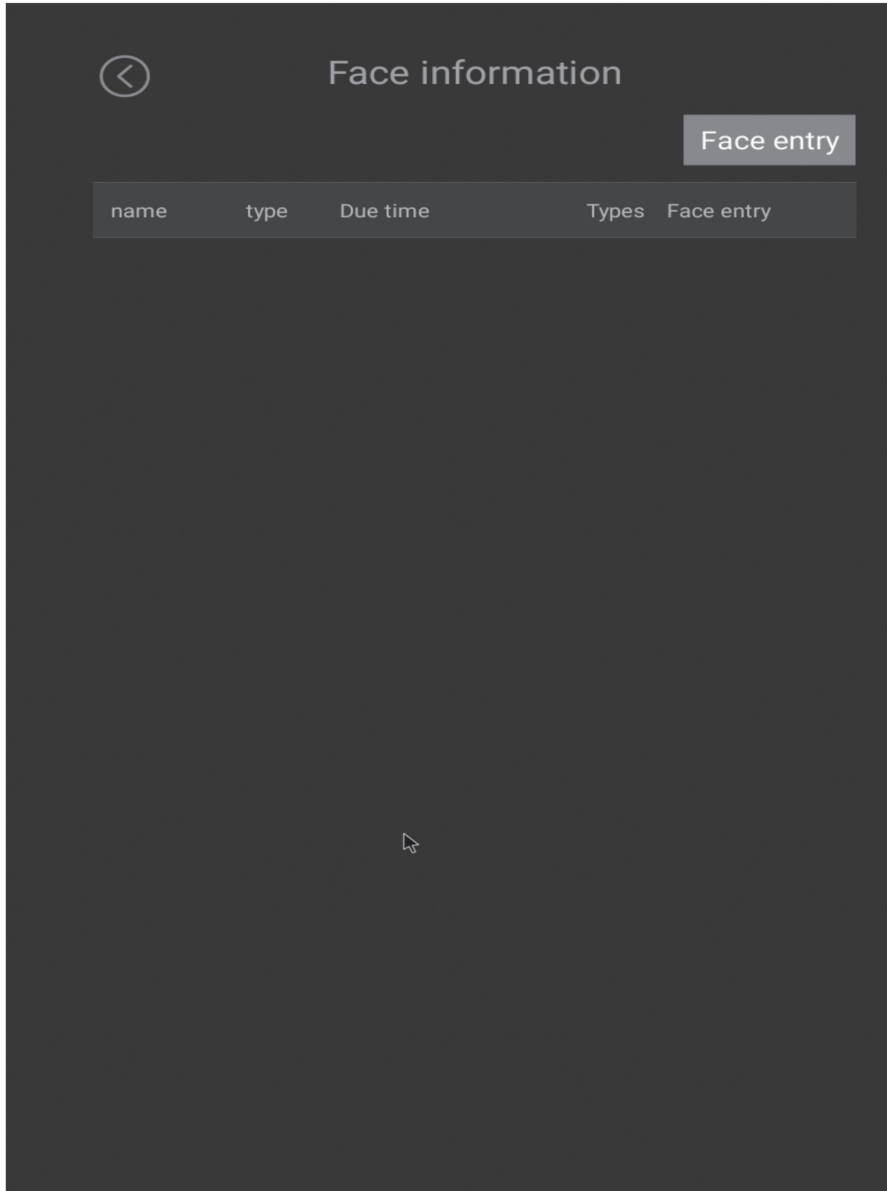 


FIGURE 8.

## APPENDIX: DISCLAIMER/TRADEMARKS

### A.1 DISCLAIMER

Black Box Corporation shall not be liable for damages of any kind, including, but not limited to, punitive, consequential or cost of cover damages, resulting from any errors in the product information or specifications set forth in this document and Black Box Corporation may revise this document at any time without notice.

### A.2 TRADEMARKS USED IN THIS MANUAL

Black Box and the Black Box logo type and mark are registered trademarks of Black Box Corporation.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.



**NEED HELP?  
LEAVE THE TECH TO US**

---

**LIVE 24/7  
TECHNICAL  
SUPPORT**

---

**1.877.877.2269**

