

# 802.3at PoE Gigabit Injector, 1-Port

# Exceeds the 802.3at standard.

Use with IP telephones, wireless access points, IP print servers, IP cameras, and Bluetooth® access points.



## 1. Specifications

Compliance: cUL/UL®; RoHS Load (Maximum): 0.60 A

Regulation: Line and load: 54-57 VDC under all

conditions

Connectors: Data in: (1) RJ-45 (10/100/1000); Data/PoE out: (1) RJ-45 (10/100/1000);

Power: (1) IEC 320 (3-pin)

Indicators: (3) LEDs: (1) ON, (1) PoE PLUS, (1) CONNECT

**Power:** AC input voltage range: 90–264 VAC; AC input voltage rating: 100–240 VAC, 47–63 Hz;

Output: 33.6 W at 56 VDC

**Size:** 1.4"H x 2.6"W x 5.5"D (1 x 6.6 x 14 cm)

Weight: 0.4 lb. (0.2 kg)

#### 2. Overview

The LPJ001A-T is a high-powered Gigabit power injector that conforms to the IEEE 802.3at power standard. As defined in 2009, this standard allows for a minimum of 25 W of power to operate with PoE equipment over a single Ethernet cable.

Use the LPJ001A-T with IP telephones, wireless access points, IP print servers, IP cameras, and Bluetooth access points.

### 3. Setting Up Your Power Injector

NOTE: Use CAT5e or higher Ethernet cables (not included).

1. Using screws, affix the metal feet on the front and/or rear to a flat surface such as a table or wall. See Figure 1.

NOTE: The power injector should not use the weight of the Ethernet cables for support.



Figure 1. Location of metal feet on the power injector.


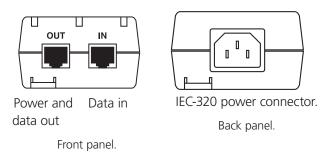


Figure 2. Ports on the power injector.

- 2. Connect the 3-pin IEC320 AC input connector to a power source. Power on the injector.
- Using CAT5e or higher cable, connect the RJ-45 port on the injector labeled "IN" to your network switch. See Figures 2 and 3.
- 4. Connect the RJ-45 port labeled "OUT" on the injector over Ethernet cable to the powered device. See Figures 2 and 3.
- 5. The LEDs will light to diagnose the connection. See Tables 1 and 2.

Black Box and the Double Diamond logo are registered trademarks of BB Technologies, Inc. Bluetooth is a registered trademark of The Bluetooth SIG, Inc. Any other trademarks mentioned in this manual are acknowleged to be the property of the trademark owners.

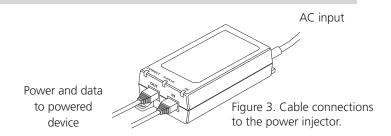

### 4. Description of LED Functions

Table 1. LEDs and their functions.

Data input from network switch

LED	State	Function	Description
ON, POE PLUS, CONNECT LEDs	All three LEDS light	Power up	Upon power-up, all three LEDs will light for two seconds, as part of the self-test for the internal microprocessor software.
ON LED	Lights green after two seconds	DC output voltage available	After two seconds, the ON LED will light green, indicating that the DC output voltage is available for powering an 802.3at PoE compliant load.
CONNECT LED	Lights green	802.3at load is attached	This green LED lights when a compliant load is attached to the output RJ-45 connector.
	Blinking	802.3at load is not attached	If the load does not comply with 802.3at PoE standards, then the LEDs will blink a code indicating that the load was not detected. See Table 2 for code descriptions.
Poe Plus Led	Lights green	Class 4 PD load detected	If the load is classified as Class 4 PD, the PoE PLUS LED will light.
	Off	Load not classified as Class 4 PD	If the load is not classifed as Class 4 PD, the PoE PLUS LED will stay off.

Table 2. Failure detection codes.

Code	Name	Description
1	Incorrect resistive signature	The green CONNECT and red PoE PLUS LEDs blink three times.
2	Incorrect capacitive signature	The green ON LED blinks three times.
3	Incorrect V offset	The green CONNECT and green ON LEDs blink three times.
4	Unstable current measurement	The green ON LED blinks three times.
5	Low voltage sensed during detection (overload)	The green PoE PLUS LED blinks three times.

NOTE: After the LEDs blink three times, the power injector will continue to try to detect a valid load. Until the correct load is applied, the LEDs will continue to blink. If an open circuit is connected to the output RJ-45 connector, then the LEDs will not blink but the power injector will continue to try to detect a valid load.

If a fault, such as an overload or short circuit, is detected, then all three LEDs will blink five times in three seconds, and then go off as the power supply tries to re-detect a valid load. The LED will indicate what is wrong with the load with the codes listed in Table 2.

LPJ001A-T, version 2