



# ServMon xB

## Environmental Monitoring System



## System Administrator's Guide



# ServMon xB

ServMon xB is a remote environmental monitoring system to increase the security of your facilities and reduce unforeseen downtimes of your equipment. Its modular conception allows to monitor many sensors and trigger emergency actions like individual control of power outlets and alert sending via SNMP traps, Email or Syslog messages.



This product carries the CE mark to indicate compliance with the European Directive on Electromagnetic Compatibility (89/336/EEC). It has been tested to EN55024:1998 and EN55022:1998.



# Contents

Safety instructions: .....	2
1. DESCRIPTION .....	3
1.1 Diagram .....	3
1.2. Package list .....	4
1.3 Option .....	4
2. INSTALLATION .....	5
3. CONFIGURATION .....	6
3.1. Configuration through the LAN using the Finder program .....	6
3.2. Configuration through an RS232 Terminal connection .....	8
3.3. Configuration through the LAN using a standard Browser .....	9
3.3.1. General / IP configuration .....	10
3.3.2. General / System time .....	12
3.3.3. General / SMTP .....	13
3.3.4. General / SNMP .....	14
3.3.5. General / Tools .....	15
3.3.6. Settings / Accounts .....	16
3.3.7. Settings / Groups .....	18
3.3.8. Settings / Peripherals .....	20
3.3.8.1. Settings / Peripherals - devices labelling .....	22
3.3.8.2. Settings / Peripherals - ePowerSwitch settings .....	24
3.3.8.3. Settings / Peripherals - Sensors settings .....	26
3.3.8.4. Settings / Peripherals - Digital Input settings .....	29
3.3.8.4.1. Digital Input Modules .....	29
3.3.8.4.2. Temperature and proximity sensors .....	32
3.3.8.4.3. Push Button settings .....	34
3.3.8.5. Settings / Peripherals - AC Current Probe settings .....	36
3.3.8.6. Settings / Peripherals - Energy Meter settings .....	38
3.3.9. Settings / Rules .....	40
3.3.9.1. Settings / Rules / Schedule Rule .....	42
3.3.9.2. Settings / Rules / Ping Monitoring Rule .....	44
3.3.9.3. Settings / Rules / Scan Monitoring Rule .....	46
3.3.9.4. Settings / Rules / Power Supply Monitoring Rule .....	48
3.3.9.5. Settings / Rules / Digital Input Monitoring Rule .....	51
3.3.9.6. Settings / Rules / Analog Input Monitoring Rule .....	53
3.3.10. Misc / Control Panel .....	56
3.3.11. Misc / Rule Panel .....	57
3.3.12. Misc / Log .....	58
3.3.13. Misc / Log Settings .....	59
4. POWER OUTLET CONTROL AND PERIPHERALS STATUS .....	60
5. ANNEXES .....	62
5.1. Ping and Scan Methods .....	62
5.2. Technical Data .....	63
5.3. Commonly used Ports .....	63
5.4. Syslog Messages: Severity Level Definitions .....	64

## Safety instructions: to read before use!



### NOTE

The ServMon xB Remote Monitoring System and all its peripheral components can only be installed by qualified people with the following installation and use instructions. The manufacturer disclaims all responsibility in case of a bad use of the ServMon xB device and its peripheral components and particularly any use with equipments that may cause personal injury or material damage.

The power adapter of the ServMon xB is designed to be installed on a dedicated circuit that must have a circuit breaker or fuse protection.

The electrical power socket used to plug the power adapter of the ServMon xB must be close to the ServMon xB device and easily accessible.

Check that the power adapter, plug and socket are in good condition.

If power switches, Energy Meter or Current Probe devices are connected to the ServMon xB, always plug them into properly grounded power sockets (two poles plus ground).

The ServMon xB is intended for indoor use only. Do NOT install them in an area where excessive moisture or heat is present.

Always disconnect the power adapter of the ServMon xB if you want to intervene on the ServMon xB or on the equipments connected to the ServMon xB.

Do NOT attempt to disassemble the ServMon xB or any of its peripheral components, they contain potentially hazardous voltages.

The ServMon xB and its peripheral components contain no user serviceable parts and repairs are to be performed by factory trained service personnel only.

Always use a shielded cable for the Ethernet connection.

# 1. DESCRIPTION

**ServMon xB** is a remote environmental monitoring system to increase the security of your facilities and reduce unforeseen downtimes of your equipment. Its modular conception allows to monitor many sensors and trigger emergency actions like individual control of power outlets and alert sending via SNMP traps, Email or Syslog messages

## 1.1 Diagram



Front side

10/100 (RJ45 Connector)

Network connection 10/100 Mbits/sec

**Link (LED):**

- off = network connection not detected
- on = network connection detected
- flashing = the device is sending or receiving data over this port

**100 (LED):**

- off = 10 Mbits/sec connection
- on = 100 Mbits/sec connection

RS232 (SUB-D 9F Connector)

Serial port RS232 for Terminal connexion

Pinout: 2 = TxD, 3 = RxD, 5 = Gnd

12 VDC Power input A

First power supply of the ServMon xB

The Web server can be powered either by Power Input A or Power Input B.



Back

12 VDC Power input B

Optional second power supply of the ServMon xB  
The Web server can be powered either by Power Input A or Power Input B.

I/O Dry contacts In1 to In4

4 digital inputs for dry contact

xBus 1 to 4 (RJ45 Connector)

Connection for all xBus peripherals

Maximal TOTAL line length: 200 meters

### Top Side

#### LEDs

Power A: - green, lights up when power applied on power input A (on front side)

Power B: - green, lights up when power applied on power input B (on front side)

Input 1: - yellow, lights up when digital input 1 closed (on back side)

Input 2: - yellow, lights up when digital input 2 closed (on back side)

Input 3: - yellow, lights up when digital input 3 closed (on back side)

Input 4: - yellow, lights up when digital input 4 closed (on back side)

Status: - green, on, ServMon xB software is started

- green/red flashing, ServMon xB is initializing

## 1.2. Package list

The following items are included:

- 1 x ServMon xB device with cabinet mounting kit
- 1 x 19" rack mount kit, ref. RMK-D,



- 1 x power adapter 12 VDC
- 1 x RJ45 M/M cable, 2 Meters
- 1 x serial cable SUB-D 9 points M/F, 1.80 Meters
- 1 x CD ROM
- 1 x quick installation guide

## 1.3 Option

The following option can be ordered separately:

- power adapter 12 VDC for redundant power supply, ref. PA 12VDC



## 2. INSTALLATION

Connect the ServMon xB to your Local Area Network.

Power-up the ServMon xB using the provided power adapter (you can use either the Power Input A on the front panel or the Power Input B on the back panel of the device).

Starting needs approximately 30 seconds. During this time, the status LED on the top of the case flashes red/green. During all this time you cannot login.

## 3. CONFIGURATION


To use the ServMon xB on your network, you must first configure its network parameters. Ask your network administrator for the parameters to use.

There are the three following methods to configure the network parameters of the ServMon xB:


### 3.1. Configuration through the LAN using the Finder program

It is the simplest and fastest configuration method if you use Windows as operating system. It allows to configure your ServMon xB through your local network even if its network parameters are not compatible with those of your PC.

1. Start the Finder.exe program contained on the CD-ROM.
2. Open the File menu and choose SCAN (or click on the first left button in the tool bar) to discover the ServMon xB connected on your LAN.

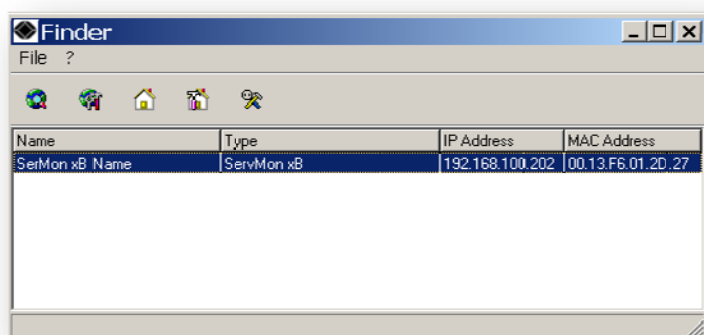

3. Open the File menu and choose **CONFIGURE** (or click on the second left button in the tool bar) to configure the network parameters.

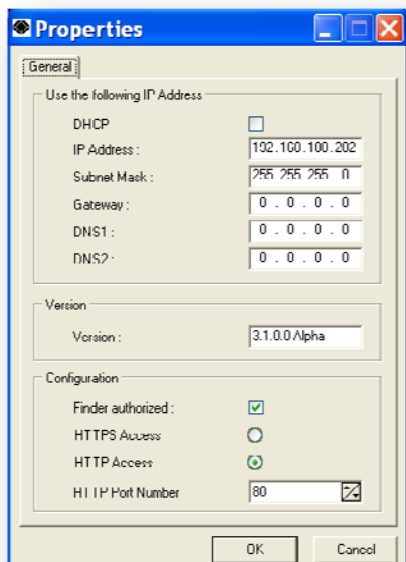

This page enables to define all IP parameters of the ServMon xB device and displays the version of the Firmware. The HTTP protocol is enabled and the Finder program is authorized at factory settings.

**!!! To achieve the highest security level we suggest to disable the configuration using the Finder program after the first installation.**

Note



**DHCP:**

Check this box if you want to obtain the IP address, the subnet mask and the default gateway for your ServMon xB via DHCP.

**Use of DHCP (Dynamic Host Configuration Protocol) requires a DHCP host to be set up on the network.**

**IP Address:**

IP address of the ServMon xB, default is 192.168.100.202.

**Subnet Mask:**

Subnet Mask of the ServMon xB, default is 255.255.255.0.

**Gateway:**

Generally the address of your router, default is blank.

**DNS 1:**

Primary DNS (Domain Name Server), default is blank.

**DNS 2:**

Secondary DNS, default is blank.

**Version:**

Firmware version of the ServMon xB

**Finder authorized:**

The Network parameters of the ServMon xB can be configured through a Local Area Network using the provided Finder Program. It is a simple and fast configuration method if you use Windows as operating system.

**!!! The Finder Program is enabled as default value. For security reasons we suggest to disable the Finder program after the first configuration.**

**HTTP / HTTPS Access:**

These options enable to choose between the standard HTTP and the HTTP over SSL protocol.

HTTPS encrypts and decrypts the page requests and page information between the client browser and the *web server of the ServMon xB using a Secure Socket Layer (SSL)*. A URL beginning with *HTTPS* indicates that the connection is encrypted using SSL. SSL transactions are negotiated by means of a Key-based encryption algorithm between your browser and the web server of your ServMon xB.

The HTTP protocol is enabled as default value.

**HTTP Port Number:**

Port number: default is 80 (HTTP).

**Standard HTTP port is 80.**

**Standard HTTPS port is 443.**

## 3.2. Configuration through an RS232 Terminal connection

1. Use the provided RS232 cable to connect the ServMon xB to an available serial port of your PC.
2. Run a Terminal program such as Windows HyperTerminal.
3. Configure the appropriate serial port @ 9.600, n, 8, 1 and no flow control.
4. On your computer, press <ENTER> until the menu appears on your screen.
5. Press the "M" on your keyboard and follow the menu to configure the network parameters of your ServMon xB.

```
NETWORK INTERFACE PARAMETERS:
Should this target obtain IP settings from the network?[N]
Static IP address [192.168.1.250]?
Subnet Mask IP address [255.255.255.0]?
Gateway IP address [192.168.1.2]?
Primary DNS Server IP address [192.168.1.2]?
Secondary DNS Server IP address [0.0.0.0]?
MISCELLANEOUS:
Finder program enabled?[Y]
```

Configuration menu

### 3.3. Configuration through the LAN using a standard Browser

During the first installation, change temporarily the network settings of your PC according to the default network settings of the ServMon xB.

Factory network settings of the ServMon xB:

IP Address: **192.168.100.202** - Port: **80**

Gateway: **255.255.255.0**

**Default factory protocol is HTTP !!!**

1. Open your Web browser and type following IP address:  
<http://192.168.100.202/sysadmin.htm>
2. Enter the administrator name and password (default for both = **admin**)
3. The home page appears, allowing you to configure all settings of your ServMon xB.

The screenshot displays the 'BLACK BOX NETWORK SERVICES' logo and 'ServMon xB' title. The navigation menu includes 'General', 'Settings', 'Misc', and 'Help'. The 'IP Configuration' tab is selected, showing fields for 'DHCP Client enabled' (unchecked), 'IP Address' (192.168.1.40), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.1.2), 'Primary DNS Server' (192.168.1.2), and 'Secondary DNS Server' (0.0.0.0). There are also checkboxes for 'Finder Program enabled' (checked) and 'HTTPS Access' (unchecked). The 'HTTP Access' checkbox is checked, and the 'HTTP Port' is set to 80. At the bottom, there are buttons for 'LOGOUT', 'DISCARD CHANGES', and 'APPLY CHANGES'.

### 3.3.1. General / IP configuration

This page enables you to define all the IP parameters of the ServMon xB Remote Monitoring System.

#### DHCP Client enabled:

Check this box if you want to obtain the IP address, the subnet mask and the default gateway for your ServMon xB via DHCP. Factory default setting for this option is disabled.

**Use of DHCP (Dynamic Host Configuration Protocol) requires a DHCP host to be set up on the network.**

#### IP Address:

IP address of the ServMon xB, default is 192.168.100.202.

If you use the https protocol and change the IP address, the system needs to compute new SSL keys. This operation takes several minutes and the LED marked "Status" on the case blinks 3 times repeatedly during all the process. During all this time, you cannot login.

#### Subnet Mask:

Subnet Mask of the ServMon xB, default is 255.255.255.0.

#### Default Gateway:

Generally the address of your router, default is blank.

#### Primary DNS Address:

Primary DNS (Domain Name Server), default is blank

#### Secondary DNS Address:

Secondary DNS, default is blank

#### Finder Program enabled:

The Network parameters of the ServMon xB can also be configured through a Local Area Network using the provided Finder Program. It is a very simple and fast configuration method if you use Windows as operating system.

The Finder Program is enabled as default value.

**!!!For security reasons we suggest to disable the Finder program after the first configuration.**

#### HTTP / HTTPS Access:

This option enables to choose between the standard HTTP and the HTTP over SSL protocol. HTTPS encrypts and decrypts the page requests and page information between the client browser and the web server of the ServMon xB using a Secure Socket Layer (SSL). A URL beginning with HTTPS indicates that the connection is encrypted using SSL. SSL transactions are negotiated by means of a Key-based encryption algorithm between your browser and the web server of your ServMon xB.

The HTTP Protocol is enabled as default value.

**!!!To achieve the highest security level we suggest to choose the HTTPS protocol.**

**HTTP Port:**

Port number: default is 80 (HTTP).

**Standard HTTP port is 80.**

**Standard HTTPS port is 443.**

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.2. General / System time

The system time of the ServMon xB is used for synchronizing scheduling actions and to timestamp SNMP traps, Syslog information, e-mails and internal logs. The system time can be set manually with the browser time of the connected computer or can be automatically synchronized with one or two NTP timeservers.

#### Current System Time:

This field shows the current system time of the ServMon xB.

As the system time is displayed through the browser, a small difference (1 to 2 sec) can appear as compared to the exact hour. The system time is nevertheless correct.

#### Use Browser Time:

If you want to set the system time using the current Browser time of your PC, select this option and click on the "Set System Time" button.

#### Use NTP Server:

If you want to set the system time using an NTP timeserver, select this option, choose a refresh interval and enter the IP address of the timeserver you wish to use in the "Primary" field. The address of a second timeserver can be specified in the "Secondary" field. The secondary timeserver is optional and is used only if the primary timeserver is not available.

You can enter either the hostname (in that case you must have specified a DNS server on the IP configuration page) or the IP address of an NTP server.

NTP uses port 123/UDP.

#### Time Zone:

Set the time zone corresponding to your location. The system clock will subsequently show local time. Without setting this, the system clock will show UTC/GMT time. Setting a time zone is only relevant if you are synchronizing with an NTP server.

#### Daylight Saving Time:

If you want to set Daylight Saving dates, check this box and specify the date you want to use.

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

#### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.3. General / SMTP

You can setup the ServMon xB to send the logs to an email account and report all activities triggered by the rules defined by the administrator.

Note

To send e-mails, you will need a SMTP server on the network and you will have to configure the following parameters:

#### SMTP enabled:

Check this box if you want the ServMon xB to be able to send e-mails.

#### SMTP Server Address:

In this field, enter the address of the e-mail server you want to use.

You can enter either the hostname (in that case you must have specified a DNS server on the IP configuration page) or the IP address of an NTP server.

NTP uses port 123/UDP.

#### SMTP Port:

In this field, enter the Port Number you want to use, default and usual port is 25.

#### From (e-mail Address):

In this field, enter the e-mail address that ServMon xB messages will appear to come from.

The name can be from 1 to 64 characters long, and can contain alphanumeric characters. This should be a valid address (generally servers reject messages that don't have a valid from address).

Example:

yourname@yourmailserver.net

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

#### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

Note

### 3.3.4. General / SNMP

The ServMon xB provides a built-in SNMP (Simple Network Management Protocol) agent, which enables you to manage the ServMon xB through SNMP-based network management systems. The ServMon xB MIB file enables to remotely read out the status of all power outlets and the values of all sensors (temperature, humidity, ambient light). It also enables to control individually all power outlets and all groups of power outlets. The MIB file is stored on the ServMon xB and can be downloaded from the General / Tools Page.

#### SNMP enabled:

Check this box if you want to enable the SNMP protocol.

#### Contact:

In this field, enter the name you want to give to the Contact field. The name can be from 1 to 64 characters long, and can contain alphanumeric characters. Default name is "contact".

#### Name:

In this field, enter the name you want to give to the Name field. The name can be from 1 to 64 characters long, and can contain alphanumeric characters. Default name is "name".

#### Location:

In this field, enter the name you want to give to the Location field. The name can be from 1 to 64 characters long, and can contain alphanumeric characters. Default name is "location".

#### Read Community:

In this field, enter the name you want to give to the Read Community field. The name can be from 1 to 64 characters long, and can contain alphanumeric characters. Default name is "public".

#### Write Community:

Check this box if you want to be able to control the power outlets through a MIB browser. In the following field, enter the name you want to give to the Write Community. The name can be from 1 to 64 characters long, and can contain alphanumeric characters. Default name is "private".

#### Trap Community:

Check this box if you want to configure the ServMon xB SNMP agent to send traps to a community. In the following field, enter the name you want to give to the Trap Community. The name can be from 1 to 64 characters long, and can contain alphanumeric characters. Default name is "trap".

#### Trap Destination 1:

Check this box and enter the primary SNMP Server address the traps will be sent to.

#### Trap Destination 2:

Check this box and enter the secondary SNMP Server address the traps will be sent to.

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

#### APPLY CHANGES:


Click "Apply Changes" at the bottom of the page to save changes.



### 3.3.5. General / Tools

This page enables you to:

- download and save the current settings of your ServMon xB on your PC
- upload an existing configuration file to your ServMon xB
- restore the factory settings
- download the ServMon xB MIB file on your PC.

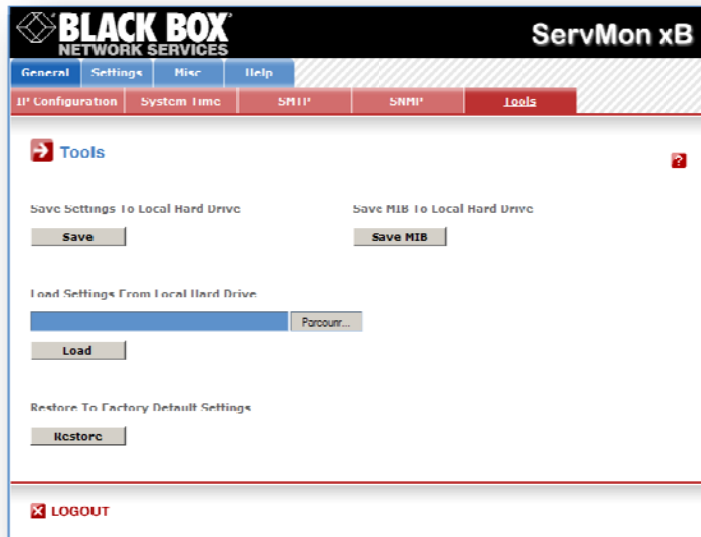**Save:**

Click this button to save the current system settings onto your local hard drive.

**Load:**

Click this button and select a settings file you want to download to the ServMon xB.

**Restore:**

Click this button if you want to restore the factory default settings.

**Save MIB:**

Click this button if you want to download the ServMon xB MIB file onto your local hard drive.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

### 3.3.6. Settings / Accounts

This page is used to create, activate, deactivate, modify and delete up to 255 accounts.

The screenshot shows the 'Accounts' tab in the ServMon xB interface. At the top, there are tabs for 'General', 'Settings', 'Misc', and 'Help'. Below these are sub-tabs for 'Accounts', 'Groups', 'Peripherals', and 'Rules'. The 'Accounts' sub-tab is active, showing a table with the following data:

Activated	User Name	Access	Edit	Delete
<input checked="" type="checkbox"/>	admin	Administrator		

At the top right of the table area, there is a link 'Add a New Account' and a help icon. At the bottom, there are three buttons: 'LOGOUT', 'DISCARD CHANGES', and 'APPLY CHANGES'.

- To activate or deactivate an account, check or uncheck the corresponding checkbox.
  - To modify an account, click on "Edit" next to the corresponding account.
  - To delete an existing account, click on "Delete" next to the corresponding account.
  - To create an account, click on "Add a New Account" on the right side of the page.
- A new page appears, allowing you to set all the parameters of the account.

The screenshot shows the 'Add a New Account' form in the ServMon xB interface. The form has the following fields:

- User Name:** A text input field.
- Password:** A text input field.
- Confirm Password:** A text input field.
- Group:** A dropdown menu with the selected value 'G1: groupe satellites'.
- Division:** A dropdown menu with the selected value 'V00: ServMon xB Name'.
- Inputs/Outputs:** A dropdown menu with the selected value 'PWA: Power Input A Name'.
- Rules:** A dropdown menu with the selected value 'R1: Monitoring of PSES (6MA)'.

At the bottom, there are three buttons: 'LOGOUT', 'DISCARD CHANGES', and 'APPLY CHANGES'.

#### User Name:

In this field, enter the name you want to give to the user. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Password:

In this field, enter the password you want to give to the user. The password can be from 4 to 32 characters long, and can contain alphanumeric characters.

#### Confirm Password:

In this field, enter the password again.

**Groups:**

This field is used to add or remove groups to the current account.

To add Groups to the current account, press the Ctrl key and click on the displayed Groups. The selected Groups are marked dark blue and their IDs are listed at the right side of the Groups field.

**Device:**

In this drop-down list, choose a device from which you want to add Inputs or Outputs to the current account.

**Inputs/Outputs:**

This field is used to add/remove Inputs or Outputs to/from the current account.

To add Inputs or Outputs to the current account, press the Ctrl key and click on the Inputs/Outputs of the device selected in the previous field. The selected Inputs/Outputs are marked dark blue and their IDs are listed at the right side of the Input/Output field.

The ServMon xB supports number of peripherals which are clearly identified by specific ID Codes.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**


Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**


Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.7. Settings / Groups

This page is used to create, modify and delete groups of power outlets which can be controlled by the ServMon xB. This functionality is particularly useful if you have to control the power supply of devices using redundant power supplies. You can create groups including several power outlets distributed on several ePowerSwitch 8XS devices.

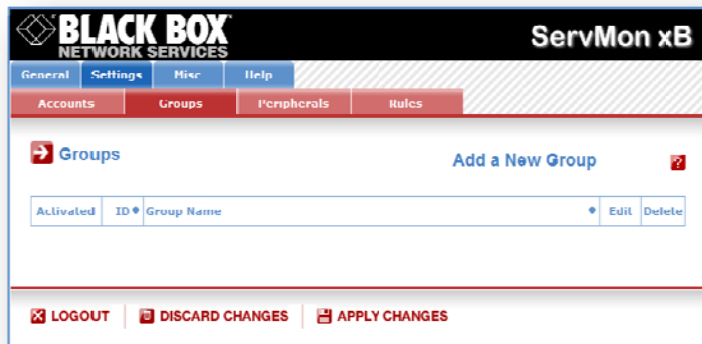

- To delete an existing group, click on "Delete" of the corresponding device.
- To add or remove power outlets to/from an existing group, click on "Edit" of the corresponding device.
- To deactivate a Group, uncheck the box "Activated" of the corresponding group.
- To add a new group, click on "Add a New Group" on the right side of the page. A new page appears, allowing you to set all parameters of the group.

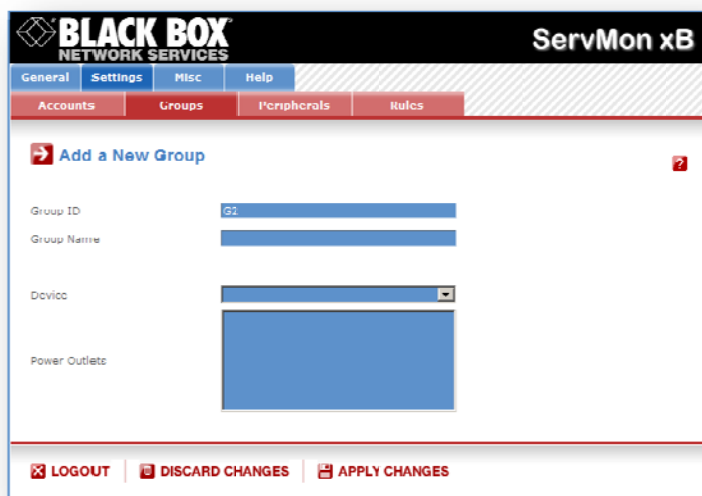

#### Group Id:

The ServMon xB automatically creates an ID Code to clearly identify each group of Power Outlets. All the ID Codes used to identify groups start with the letter "G".

#### Group Name:

In this field, enter the name you want to give to the selected group. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Device:

In this drop-down list, choose a Power Switch from which you want to add power outlets to the selected group.

**Power Outlets:**

This field is used to add and remove power outlets to/from the group.

- To add power outlets to the group, press the Ctrl key and click on the power outlets of the Power Switch selected in the field above. The selected power outlets are marked dark blue and their names are listed at the right of the field "Power Outlets".
- To remove a power outlet from the group, press the Ctrl key and click on the power outlet you wish to remove.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**


Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8. Settings / Peripherals

The Peripherals page is used to enable and configure the xBus peripherals which have been connected to the ServMon xB. This page is also very useful to give an overview of all the peripherals which are or have been connected to the ServMon xB.

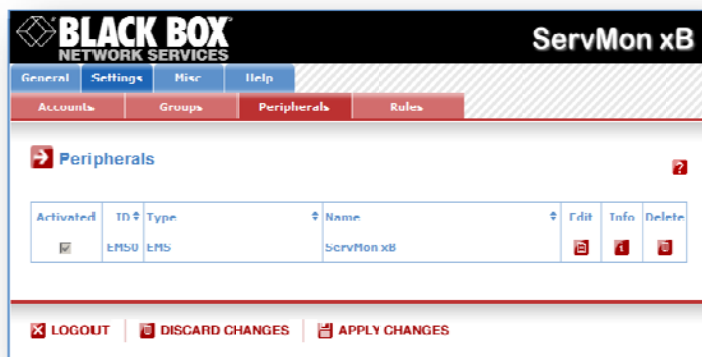

Following xBus peripherals can be connected to the ServMon xB Environmental Monitoring System:

- 16 x Secure Power Switch Satellite (8-Port) or Power Switch Satellite (1-Port)
- 16 x EnergyMeter for real-time power consumption measuring
- 16 x current probes
- 32 x sensors (temperature, humidity and ambient light)
- 16 x Digital Input Modules (with 16 digital inputs) or 16 x push buttons or 16 x IR proximity sensors
- any xBus Extenders
- any xBus Optocouplers

You can connect an xBus peripheral to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain Connection).

#### Connecting an xBus peripheral to the ServMon xB:

1. Set the dip switches of the xBus peripheral so that the selected I/O address does not conflict with another peripheral already connected to the xBus (see user's guide of the corresponding peripheral).

- Do NOT connect the xBus cable (and the power cable if need be) before setting its DIP switches
- Do NOT use the same address for two different xBus peripherals

2. Using a standard RJ45 Network cable, connect the xBus peripheral to an xBus connector on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB.

#### After connecting an xBus peripheral, you MUST enable it in the Peripherals Page:


1. Open your browser and log in to the Administrator's Configuration Page (default: <http://192.168.100.202/sysadmin.htm>)
2. Enter the administrator name and password (default for both = admin).  
=> The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the peripheral is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of 1 to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

## Problem / Troubleshooting

- If you choose any setting that is already in use by another xBus peripheral connected to the ServMon xB, an address conflict occurs and the corresponding Edit and Info symbol of the previous connected peripheral will be replaced by a yellow warning triangle. In that case, disconnect your last connected peripheral, remove its power cable if need be, change the DIP switch settings to solve the address conflict and reconnect the peripheral. If the conflict is solved, all connected peripherals will appear on the Peripherals page and their Edit and Info Symbol will be red.
- The yellow warning triangle is also displayed to point out that a connected xBus peripheral can no longer be reached (for instance if a cable is disconnected).
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

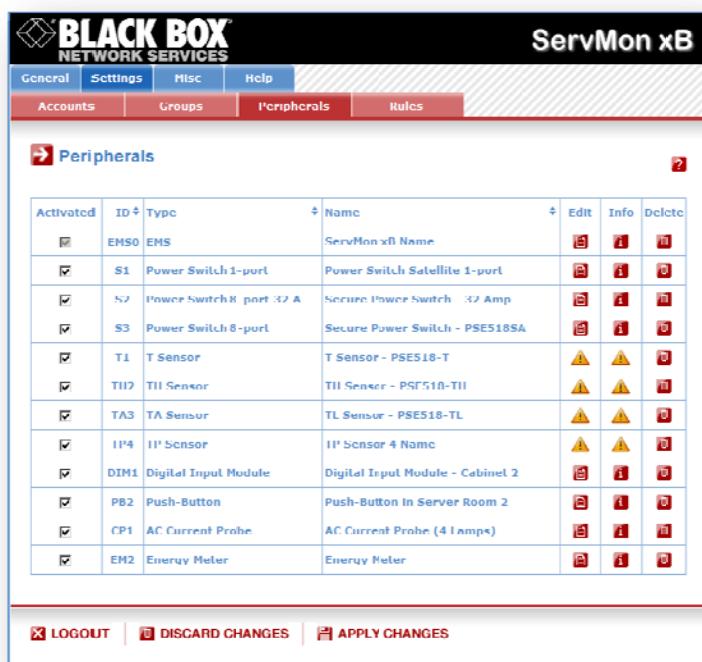

The Peripherals page is used to configure all peripherals connected to the ServMon xB.

- To activate a peripheral, check the box "Activated" of the corresponding device.
- To deactivate a peripheral, uncheck the box "Activated" of the corresponding device. Even if the device remains physically connected to the ServMon xB, it will no longer be accessible by its authorized users.  
**The ServMon xB cannot be deactivated.**
- To remove a peripheral, click on the corresponding "Delete" button.  
**A peripheral cannot be deleted if it belongs to a group or a rule. In that case, you will first have to delete it from the group or the rule.**
- To know the Firmware version of a device, click on the corresponding "Info" button.
- To configure or modify the settings of a device, click on the corresponding "Edit" button.




### 3.3.8.1. Settings / Peripherals - devices labelling

This page enables to label both power supply inputs, the 4 digital inputs located on the back of the ServMon xB and all connected devices. Names of up to 32 alphanumeric characters in length are supported and appear in log files, Syslog messages, SNMP traps and Emails to avoid confusions.

#### Procedure:

1. Open your browser and log in to the Administrator's Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings Tab and then on the Périphrasa Tab. Following new page appears, allowing you to define the labels.

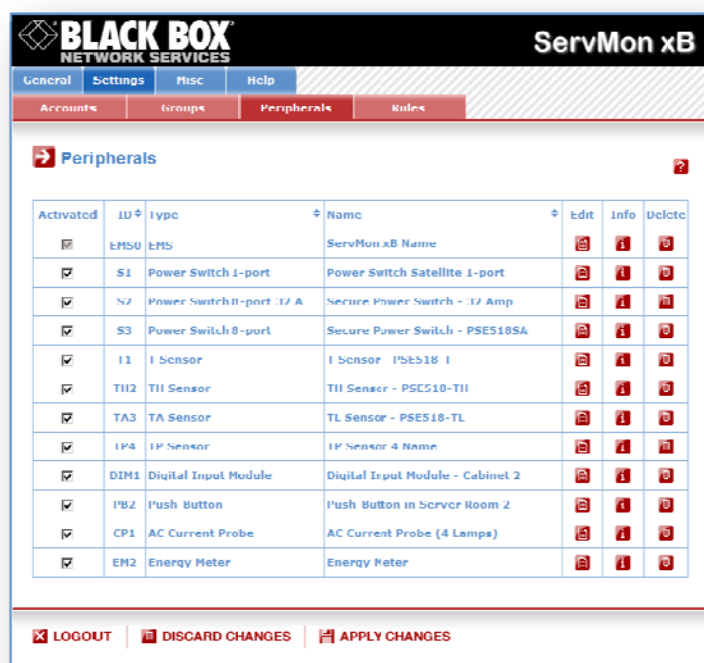

#### ID:

The ServMon xB automatically creates an ID Code to clearly identify each device and each input.

- EMS0 identifies the ServMon xB
- PW followed by "A" or "B" identifies power supply input A and B of the ServMon xB
- DI followed by 1 to 4 identifies the Digital Inputs of the ServMon xB
- DIM followed by a number identifies the Digital Input Modules
- S followed by a number identifies the power switches
- T followed by a number identifies the temperature sensors
- TH followed by a number identifies the temperature and humidity sensors
- TA followed by a number identifies the temperature and ambient light sensors
- TP followed by a number identifies the temperature and proximity sensors
- PB followed by a number identifies the push buttons
- CB followed by a number identifies the current probes
- EM followed by a number identifies the energy meters

#### Name:

In this field, enter the name you want to give to the selected device and its analog or digital inputs, power supply or Digital Input. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.



**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8.2. Settings / Peripherals - ePowerSwitch settings

Up to 16 Power Switches 8-Port or Power Switches 1-Port can be attached to the ServMon xB to turn electrical devices on and off as well as reboot them remotely. You can connect a Power Switch 1-port or 8-port to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain Connection).

**To connect a Power Switch to the ServMon xB, use following procedure:**

1. Set the dip switches of the Power Switch so that the selected I/O address does not conflict with another Power Switch already installed (see user's guide of the corresponding Power Switch).


 - Do NOT connect the xBus cable and the power cable before setting its DIP switches,  
- Do NOT use the same address for two different Power Switch devices.

2. Using a standard RJ45 network cable, connect the Power Switch to an xBus connector on the back of the ServMon xB or behind another xBus peripheral already connected to the ServMon xB.
3. Connect the power cable(s) to your Power Switch device.

**To configure the Power Switch, use following Log in procedure:**

1. Open your browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the Power Switch is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of up to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

 The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

### Problem / Troubleshooting

- If you choose any setting that is already in use by another Power Switch connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of the previous connected Power Switch will be changed to black. In that case, disconnect your last connected Power Switch, remove its power cable, change the DIP switch settings to solve the address conflict and reconnect the Power Switch again. If the conflict is solved, all connected Power Switches will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

To configure or modify the settings of the connected Power Switch device, click on the corresponding "Edit" button in the Peripherals page. A new page appears, allowing you to set all the parameters of the Power Switch device.

**Power Switch 1 Configuration:**

ID	Designation	Name
01	Device	Power Switch 1

**Power Supplies:**

ID	Designation	Name
PWA	Power Input 1	Power Input

**Power Outlets:**

ID	Designation	Name	Default Power-Up	Power Up Delay (sec)	Function Delay (sec)
01	Output 1	Power Outlet 1 - Lamp L2	Last St	0	10

**Power Switch 8 Configuration:**

ID	Designation	Name
08	Device	Power Switch 8

**Power Supplies:**

ID	Designation	Name
PWA	Power Input 1	Power Input A
PWB	Power Input 2	Power Input B

**Power Outlets:**

ID	Designation	Name	Default Power-Up	Power Up Delay (sec)	Function Delay (sec)
01	Output 1	Power Outlet 1 - Lamp L1	Last St	0	10
02	Output 2	Power Outlet 2	Last St	0	10
03	Output 3	Power Outlet 3	Last St	0	10
04	Output 4	Power Outlet 4	Last St	0	10
05	Output 5	Power Outlet 5	Last St	0	10
06	Output 6	Power Outlet 6	Last St	0	10
07	Output 7	Power Outlet 7	Last St	0	10
08	Output 8	Power Outlet 8	Last St	0	10

#### ID:

The ServMon xB automatically creates an ID Code to clearly identify each connected Power Switch, its power input(s) and its power outlet(s).

- S followed by a number between 1 and 16 identifies the Power Switch unit,
- PW followed by "A" or "B" identifies power supply input A and B of each Power Switch,
- followed by 1 to 8 identifies the Power outlet output,

#### Name:

In this field, enter the name you want to give to the selected Power Switch. The name can be from 1 to 32 characters long and can contain alphanumeric characters.

#### Power Supplies:

In this field, enter the name you want to give to the two power input 1 and 2. The name can be from 1 to 32 characters long and can contain alphanumeric characters.

#### Power Outlets:

In this field, enter the name you want to give to each power outlet of the Power Switch. The name can be from 1 to 32 characters long and can contain alphanumeric characters.

#### Default Power-Up:

In the drop-down lists, choose for each power outlet the default status to apply after power-up.

You can choose between:

- "On" if you want the corresponding power outlet to be always switched On after power-up.
- "Off" if you want the corresponding power outlet to be always switched Off after power-up.
- "Last Status" if you want that the corresponding power outlet takes again the state it was in before power failure.

#### Power up delay:

In this field, enter the power up delay you want to define for each power outlet. Power up delay means the delay before the power outlet will take the defined status after power up. The delay can be set between 1 and 65535 seconds, the value 0 means that no delay has to be applied after power up.

#### Function delay:

In this field, enter the delay you want to define before the execution of a function (for example Restart function of an outlet).

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

#### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8.3. Settings / Peripherals - Sensors settings

Up to 32 temperature, temperature & humidity, temperature and ambient light sensors or 16 temperature and proximity sensors can be attached to the ServMon xB to monitor environmental conditions. You can connect a sensor to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain Connection).

#### **To connect an sensor to the ServMon xB, use following procedure:**

1. Set the dip switches of the sensor so that the selected I/O address does not conflict with another sensor already installed (see user's guide of the corresponding sensor).

- Do NOT connect the xBus cable before setting its DIP switches
- Do NOT use the same address for two different sensors

2. Using a standard RJ45 network cable, connect the sensor to an xBus connector on the back of the ServMon xB or behind another xBus peripheral already connected to the ServMon xB.

#### **To configure the sensor, use following Log in procedure:**

1. Open you browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the sensor is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of up to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

#### **Problem / Troubleshooting**

- If you choose any setting that is already in use by another sensor connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of the previous connected sensor will be changed to black. In that case, disconnect your last connected sensor, change the DIP switch settings to solve the address conflict and reconnect the sensor again. If the conflict is solved, all connected sensors will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

To configure or modify the settings of a sensor, click on the corresponding "Edit" button in the Peripherals page. A new page appears, allowing you to set all the parameters of the temperature (T), temperature & humidity (TH), temperature & ambient light (TA) or temperature & proximity (TP) sensors.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**T Sensor**

ID	Designation	Name
T1	Device	T Sensor - PSE518-T

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
T1	Analog Input 1	Temperature in Room 1	°C	<input type="checkbox"/>	1

LOGOUT DISCARD CHANGES APPLY CHANGES

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**TP Sensor**

ID	Designation	Name
TP1	Device	TP Sensor 1 Name

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
T1	Analog Input 1	Temperature Input Name	°C	<input checked="" type="checkbox"/>	1

**Digital Inputs**

ID	Designation	Name
TP1	Digital Input 1	Proximity input Name

LOGOUT DISCARD CHANGES APPLY CHANGES

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**TA Sensor**

ID	Designation	Name
TA3	Device	TA Sensor - PSE518-TL

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
T1	Analog Input 1	Temperature in Cabinet A1	°C	<input checked="" type="checkbox"/>	1
AL2	Analog Input 2	Ambient Light in Server room	Lux	<input checked="" type="checkbox"/>	1

LOGOUT DISCARD CHANGES APPLY CHANGES

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**TH Sensor**

ID	Designation	Name	Unit	Graph	Period (minutes)
113	Designation	Name			
117	Device	111 Sensor - PSH 7010-111			

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
11	Analog Input 1	Temperature in Rack 1	°C	<input checked="" type="checkbox"/>	1
112	Analog Input 2	Humidity in Rack 2	%RH	<input checked="" type="checkbox"/>	1

LOGOUT DISCARD CHANGES APPLY CHANGES

**Sensor ID:**

The ServMon xB automatically creates an ID Code to clearly identify each connected sensor.

- T followed by a number between 1 and 32 identifies each temperature sensor
- TH followed by a number between 1 and 32 identifies each humidity sensor
- TA followed by a number between 1 and 32 identifies each ambient light sensor
- TP followed by a number between 1 and 16 identifies each proximity sensor

The ServMon xB supports a total of up to 32 sensors but only 16 temperature and proximity sensors with digital input.

**Sensor Name:**

In this field, enter the name you want to give to the selected sensor. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

**Analog Inputs****Name:**

In this field enter the name you want to give to the analog inputs.

**Unit:**

In this field enter the unit of measurement you want to be displayed (°C, %RH...).

**Graph:**

Check this box if you want a display of the analog inputs.

**Period (minutes):**

In this field enter the period between two measurements.

**Digital Inputs****Name:**

In this field enter the name you want to give to the digital input.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8.4. Settings / Peripherals - Digital Input settings

Up to 16 x Digital Input Modules, Push Buttons or Temperature and Proximity sensors can be attached to the ServMon xB to monitor environmental conditions. You can connect them to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain Connection).

#### 3.3.8.4.1. Digital Input Modules

Up to 16 Digital Input Modules with 16 inputs for dry contacts (door contacts, smoke and water detectors...) can be attached to the ServMon xB to monitor environmental conditions.

#### **To connect a Digital Input Module to the ServMon xB, use following procedure:**

1. Set the dip switches on the bottom of the case so that the selected I/O address does not conflict with another Digital Input Module already installed (see user's guide of the Digital Input Module).

- Do NOT connect the xBus cable and the Power adapter(s) before setting its DIP switches
- Do NOT use the same address for two different Digital Input Modules

2. Using a standard RJ45 network cable, connect the Digital Input Module to an xBus connector on the back of the ServMon xB or behind another xBus peripheral already connected to the ServMon xB.
3. Connect the power adapter(s) to your Digital Input Module.

#### **To configure the Digital Input Module, use following Log in procedure:**

1. Open your browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the Digital Input Module is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of up to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

#### **Problem / Troubleshooting**

- If you choose any setting that is already in use by another Digital Input Module connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of the previous connected Digital Input Module will be changed to black. In that case, disconnect your last connected Digital Input Module, remove its power adapter(s), change the DIP switch settings to solve the address conflict and reconnect it again. If the conflict is solved, all connected devices will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

To configure or modify the settings of the Digital inputs, click on the corresponding "Edit" button in the Peripherals page.

A new page appears, allowing you to set all the parameters of the Digital Inputs.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**Digital Input Module**

ID	Designation	Name
DIM1	Device	Digital Input Module - Cabinet 2

**Power Supplies**

ID	Designation	Name
PWA	Power Input 1	Power Input A (power adapter 1)
PWB	Power Input 2	Power Input B (power adapter 2)

**Digital Inputs**

ID	Designation	Name
DI1	Digital Input 1	Door contact #1
DI2	Digital Input 2	Door contact #2
DI3	Digital Input 3	Door contact #3
DI4	Digital Input 4	Door contact #4
DI5	Digital Input 5	Door contact #5
DI6	Digital Input 6	Door contact #6
DI7	Digital Input 7	Digital Input 7
DI8	Digital Input 8	Digital Input 8
DI9	Digital Input 9	Digital Input 9
DI10	Digital Input 10	Digital Input 10
DI11	Digital Input 11	Digital Input 11
DI12	Digital Input 12	Digital Input 12
DI13	Digital Input 13	Digital Input 13
DI14	Digital Input 14	Digital Input 14
DI15	Digital Input 15	Digital Input 15
DI16	Digital Input 16	Digital Input 16

LOGOUT DISCARD CHANGES APPLY CHANGES

#### ID:

The ServMon xB automatically creates an ID Code to clearly identify each connected Digital Input Module.

- DIM followed by a number between 1 and 16 identifies each Digital Input Module
- PW followed by "A" or "B" identifies power supply input A and B of each Digital Input Module
- DI followed by a number between 1 and 16 identifies each digital input of the module

#### Name:

In this field, enter the name you want to give to the Digital Input Module. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Power Supplies:

In this field, enter the name you want to give to the two power supplies "PWA" and "PWB". The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Digital Inputs

##### Name:

In this fields, enter the name you want to give to each Digital Input. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.



**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8.4.2. Temperature and proximity sensors

Up to 16 temperature and proximity sensors can be attached to the ServMon xB to monitor environmental conditions. You can connect a sensor to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain Connection).

#### **To connect a sensor to the ServMon xB, use following procedure:**

1. Set the dip switches of the sensor so that the selected I/O address does not conflict with another sensor already installed (see user's guide of the corresponding sensor).


- 
- Do NOT connect the xBus cable before setting its DIP switches
  - Do NOT use the same address for two different sensors

2. Using a standard RJ45 network cable, connect the sensor to an xBus connector on the back of the ServMon xB or behind another xBus peripheral already connected to the ServMon xB.

#### **To configure the sensor, use following Log in procedure:**

1. Open your browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the sensor is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of up to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.



The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

#### **Problem / Troubleshooting**

- If you choose any setting that is already in use by another sensor connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of the previous connected sensor will be changed to black. In that case, disconnect your last connected sensor, change the DIP switch settings to solve the address conflict and reconnect the sensor again. If the conflict is solved, all connected sensors will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

To configure or modify the settings of a sensor, click on the corresponding "Edit" button in the Peripherals page. A new page appears, allowing you to set all the parameters of the temperature & proximity (TP) sensors.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help Accounts Groups Peripherals Rules

**TP Sensor**

ID	Designation	Name
TP1	Device	TP Sensor /1 Name

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
I1	Analog Input 1	Temperature Input Name	°C	<input checked="" type="checkbox"/>	1

**Digital Inputs**

ID	Designation	Name
D1	Digital Input 1	Proximity Input Name

LOGOUT DISCARD CHANGES APPLY CHANGES

#### Sensor ID:

The ServMon xB automatically creates an ID Code to clearly identify each connected sensor. TP followed by a number between 1 and 16 identifies each proximity sensor

Note

The ServMon xB supports a total of up to 16 temperature and proximity sensors.

#### Sensor Name:

In this field, enter the name you want to give to the selected sensor. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Analog Inputs

##### Name:

In this field enter the name you want to give to the analog inputs.

##### Unit:

In this field enter the unit of measurement you want to be displayed (°C, %RH...).

##### Graph:

Check this box if you want a display of the analog inputs.

##### Period (minutes):

In this field enter the period between two measurements.

#### Digital Inputs

##### Name:

In this field enter the name you want to give to the digital input.

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

#### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8.4.3. Push Button settings

Up to 16 Push buttons can be attached to the ServMon xB to trigger manually pre-programmed actions. You can connect a Push Button to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain Connection).

**To connect a Push button to the ServMon xB, use following procedure:**

1. Set the dip switches of the Push button so that the selected I/O address does not conflict with another Push button or another Digital Input Module already installed (see user's guide of the Push button).

- Do NOT connect the xBus cable before setting its DIP switches
- Do NOT use the same address for two different Push buttons

2. Using a standard RJ45 network cable, connect the Push button to an xBus connector on the back of the ServMon xB or behind another xBus peripheral already connected to the ServMon xB.

**To configure the Push button, use following Log in procedure:**

1. Open your browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the Push button is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of 1 to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

### Problem / Troubleshooting

- If you choose any setting that is already in use by another Push button or another Digital Input Module connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of a previous connected Push button or Digital Input Module will be changed to black. In that case, disconnect your last connected Push button, change the DIP switch settings to solve the address conflict and reconnect the Push button again. If the conflict is solved, all connected devices will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

To configure or modify the settings of the Push Button, click on the corresponding "Edit" button in the Peripherals page. A new page appears, allowing you to set all the parameters of the connected Push Buttons.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help Accounts Groups **Peripherals** Rules

**Push-Button**

ID	Designation	Name
PB2	Device	Push-Button in Server Room 2

**Digital Inputs**

ID	Designation	Name
SP1	Digital Input 1	Short Push action
LP2	Digital Input 2	Long Push action

LOGOUT DISCARD CHANGES APPLY CHANGES

#### ID:

The ServMon xB automatically creates an ID Code to clearly identify each Push button.

- PB followed by a number between 1 and 16 identifies each Push button
- SP1 identifies each "Short Push" action (during less than 1 second)
- LP2 identifies each "Long Push" action (during more than 3 seconds)

#### Name:

In this field, enter the name you want to give to the selected Push button. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Digital Inputs

#### Name:

In this fields enter the name of the two type of action (Short Push or Long Push).

### 3.3.8.5. Settings / Peripherals - AC Current Probe settings

Up to 16 AC Current probes can be attached to the ServMon xB to monitor the current consumption of an electrical device (PC, server, light, printer...) and trigger actions if predefined limits are exceeded. You can connect an AC Current probe to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain connection).

#### **To connect an AC Current probe to the ServMon xB, use following procedure:**

1. Set the dip switches of the AC Current probe so that the selected I/O address does not conflict with another AC Current probe already installed (see user's guide of the AC Current probe)

- Do NOT connect the xBus cable and the Power cable before setting its DIP switches
- Do NOT use the same address for two different AC Current probes

2. Using a standard RJ45 network cable, connect the AC Current probe to an xBus connector on the back of the ServMon xB or behind another AC Current probe already connected to the ServMon xB.
3. Connect the power cable to your device

#### **To configure the Current Probe, use following Log in procedure:**

1. Open your browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab

If the AC Current probe is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of 1 to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

**The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).**

#### **Problem / Troubleshooting**

- If you choose any setting that is already in use by another AC Current probe connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of the previous connected AC Current probe will be changed to black. In that case, disconnect your last connected AC Current probe, remove its power cable, change the DIP switch settings to solve the address conflict and reconnect the AC Current probe again. If the conflict is solved, all connected AC Current probes will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

To configure or modify the settings of an AC Current Probe, click on the corresponding "Edit" button in the Peripherals page. A new page appears, allowing you to set all the parameters of the connected AC Current Probe.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**AC Current Probe**

ID	Designation	Name
CP1	Device	AC Current Probe (4 Amps)

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
I1	Analog Input 1	Measure current of ePS 4	A	<input checked="" type="checkbox"/>	5

LOGOUT DISCARD CHANGES APPLY CHANGES

#### ID:

The ServMon xB automatically creates an ID Code to clearly identify each Current Probe.

- CP followed by a number between 1 and 16 identifies each current probe
- I1 identifies the current analog input.

#### Name:

In this field, enter the name you want to give to the selected current probe. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Analog Inputs

##### Name:

In this field, enter the name you want to give to the analog input. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

##### Unit:

In this field enter the unit of measurement you want to be displayed.

##### Graph:

Check this box if you want a display of the analog inputs.

##### Period (minutes):

In this field enter the period between two measurements.

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

#### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.8.6. Settings / Peripherals - Energy Meter settings

Up to 16 EnergyMeters can be attached to the ServMon xB to monitor the energy consumption (kWh) and the current consumption (Amp RMS) of eight electrical devices (PC, server, light, printer...) and trigger actions if predefined limits are exceeded. The EnergyMeter is also able to monitor the Input voltage of both 20 Amps power inputs. You can connect an EnergyMeter to each of the 4 connectors located on the back of the ServMon xB or behind an xBus peripheral already connected to the ServMon xB (Daisy Chain connection).

#### **To connect an EnergyMeter to the ServMon xB, use following procedure:**

1. Set the dip switches of the EnergyMeter so that the selected I/O address does not conflict with another EnergyMeter already installed (see user's guide of the EnergyMeter)

- Do NOT connect the xBus cable and the Power cable(s) before setting its DIP switches
- Do NOT use the same address for two different AC Current probes

2. Using a standard RJ45 Network cable, connect the EnergyMeter to an xBus connector on the back of the ServMon xB or behind another xBus peripheral already connected to the ServMon xB.
3. Connect the power cable(s) to your EnergyMeter.

#### **To configure the EnergyMeter, use following Log in procedure:**

1. Open you browser and log in to the Administrator's Configuration Page, (ex. <http://192.168.100.202/sysadmin.htm>).
2. Enter the administrator name and password (default for both = admin). The home page appears.
3. Click on the Settings and then on the Peripherals Tab.

If the EnergyMeter is properly connected to the ServMon xB it will be automatically recognized and displayed on this page after a delay of 1 to 60 seconds. In this case, the colour of the corresponding Edit and Info symbol is red.

The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).

#### **Problem / Troubleshooting**

- If you choose any setting that is already in use by another EnergyMeter connected to the ServMon xB, a conflict occurs and the corresponding Edit and Info symbol of the previous connected EnergyMeter will be changed to black. In that case, disconnect your last connected EnergyMeter, remove its power cable(s), change the DIP switch settings to solve the address conflict and reconnect the AC Current probe again. If the conflict is solved, all connected EnergyMeter will now appear on the Peripherals page and their Edit and Info Symbol will be red.
- The Peripheral page is not automatically refreshed, so you need to refresh it by clicking the peripheral TAB again (or push [F5] or press <CTRL-R> on your keyboard if you use Internet Explorer or Mozilla Firefox).



To configure or modify the settings of the EnergyMeter, click on the corresponding "Edit" button in the Peripherals page.

A new page appears, allowing you to set all the parameters of the Digital Inputs.

This page is used to configure the connected Push Buttons.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**Energy Meter**

ID: Designation: Name:

EM? Device: Energy Meter? Name

**Analog Inputs**

ID	Designation	Name	Unit	Graph	Period (minutes)
E1	Analog Input 1	Real Energy Input 1 Name	kWh	<input type="checkbox"/>	1
I1	Analog Input 2	Current Input 1 Name	A	<input type="checkbox"/>	1
E2	Analog Input 3	Real Energy Input 2 Name	kWh	<input type="checkbox"/>	1
I2	Analog Input 4	Current Input 2 Name	A	<input type="checkbox"/>	1
E3	Analog Input 5	Real Energy Input 3 Name	kWh	<input type="checkbox"/>	1
I3	Analog Input 6	Current Input 3 Name	A	<input type="checkbox"/>	1
E4	Analog Input 7	Real Energy Input 4 Name	kWh	<input type="checkbox"/>	1
I4	Analog Input 8	Current Input 4 Name	A	<input type="checkbox"/>	1
E5	Analog Input 9	Real Energy Input 5 Name	kWh	<input type="checkbox"/>	1
I5	Analog Input 10	Current Input 5 Name	A	<input type="checkbox"/>	1
E6	Analog Input 11	Real Energy Input 6 Name	kWh	<input type="checkbox"/>	1
I6	Analog Input 12	Current Input 6 Name	A	<input type="checkbox"/>	1
E7	Analog Input 13	Real Energy Input 7 Name	kWh	<input type="checkbox"/>	1
I7	Analog Input 14	Current Input 7 Name	A	<input type="checkbox"/>	1
E8	Analog Input 15	Real Energy Input 8 Name	kWh	<input type="checkbox"/>	1
I8	Analog Input 16	Current Input 8 Name	A	<input type="checkbox"/>	1
PWA17	Analog Input 17	Power A Input Name	V	<input type="checkbox"/>	1
PWB18	Analog Input 18	Power B Input Name	V	<input type="checkbox"/>	1

LOGOUT DISCARD CHANGES APPLY CHANGES

### ID:

The ServMon xB automatically creates an ID Code to clearly identify each Energy Meter. All the ID Codes used to identify a Energy Meter start with the characters "EM" followed by a number.

### Name:

In this field, enter the name you want to give to the selected Energy Meter. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

### Analog Inputs

#### Name:

In this field enter the name you want to give to the analog inputs.

#### Unit:

In this field enter the unit of measurement you want to be display (A, kWh, V...).

#### Graph:

Check this box if you want a display of the analog inputs.

#### Period (minutes):

In this field enter the period between two measurements.

### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

### DISCARD CHANGES:


Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.9. Settings / Rules

Rules are used to control actions according to a specific event. For example, you can define a rule to switch a power outlet OFF and send an alert message using different methods like email, SNMP or Syslog when a temperature, humidity, ambient light or current exceeds a predefined value or when a contact is open.

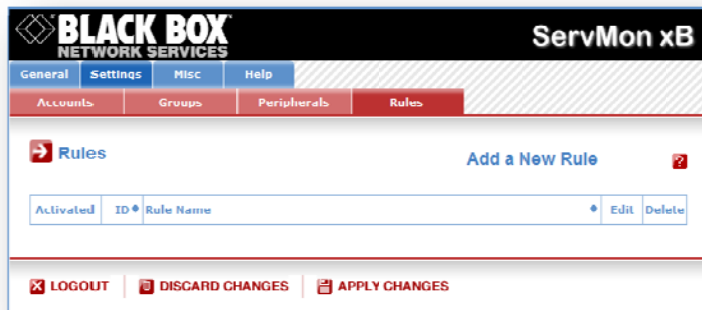

- To remove an existing rule, click on "Delete" of the corresponding rule.
- To modify a rule, click on "Edit" of the corresponding rule.

This page is used to create, modify and delete rules.

- To add a new rule, click on "Add a New Rule" on the right side of the page.

A new page appears, allowing you to set all the parameters of the rule.

A total of 255 rules can be created and there are 6 different types of rules.

**1. Schedule Rule:**

This rule is used to control actions according to the scheduler of the Master Unit.

**2. Ping Monitoring Rule:**

This rule is used to control actions according to the response to a Ping command.

**3. Scan Monitoring Rule:**

This rule is used to control actions according to the response to a Scan command.

**4. Power Supply Monitoring Rule:**

This rule is used to control actions according to the state of the power supplies of the ServMon xB and its peripherals like the ePowerSwitch 8XS and the Digital Input Module.

**5. Digital Input Monitoring Rule:**

This rule is used to control actions according to the state of a dry contact connected to the back panel of the ServMon xB, to a Digital Input Module or a Push Button connected over the xBus to the ServMon xB.

**6. Analog Input Monitoring Rule:**

This rule is used to control actions when an analog input (temperature, humidity, ambient light, current...) exceeds a predefined value.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.9.1. Settings / Rules / Schedule Rule

This rule can be used to execute some actions according to a defined time table.

**BLACK BOX NETWORK SERVICES** **ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals **Rules**

**Add a New Monitoring Rule**

Rule ID:

Rule Name:

Rule Color:

Rule Type:

Schedule Action

Start: Hour:  Minute:

Every ☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat

☐ Set Group:  to

☐ Set Power Unit:  to

☐ Mail to:

Type of Action

☐ Mail to:

☐ Syslog / Trap / Mail Message (max: 255 characters):

#### Rule ID:

The ServMon xB automatically creates an ID Code to clearly identify each rule. All the ID Codes used to identify rules start with the letter "R" followed by a number from 1 to 255. If you delete a rule in the middle of the Rule list, the number of this rule will only be used again if no other rule is available.

#### Rule Name:

In this field, enter the name you want to give to the rule. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Rule Color:

In this field, select one of the 48 standard colours you want to use to highlight the rule when executed. To use own colours, just type in the Hex value of the colour you want. The Rule highlighting allows to quickly identify the triggered rule when displayed in the Rule Panel page or in a special users page.

#### Rule Type:

In this drop-down list, choose Schedule Rule then configure the event and the actions to perform.

### Configuring the Event

#### Schedule Action:

Here you can define the time when the rule has to be executed. In the Drop-Down lists choose the time and below, check one or more day boxes.

## Configuring the Actions

For the Event defined above, you can choose and configure following actions:

### Set Group:

**This type of action appears and can be configured only if you already have created at least one group (Settings/Groups Tab).**

Check this box and in the corresponding drop-down list choose the power outlet group the rule will apply to. In the next corresponding drop-down list, choose the action to execute.

Each power outlet group can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

- If you choose 0 second for the delay, the delay will be the delay defined in the "Power Outlets Page".
- If you choose a delay different from 0, the delay will replace the delay defined in the "Power Outlets Page".

### Set Power Outlet:

Check this box and in the corresponding drop-down list, choose the power outlet the rule will apply to. In the next corresponding drop-down list, choose the action to execute. Each power outlet can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

### Send Syslog Message:

**This type of action appears and can be configured only if you already have created at least one destination Syslog Server (Misc/Log Settings Tab).**

Check this box if you want to send a message to a Syslog server. In the following drop-down lists choose the facility and the severity of the message to send. The address of the Syslog server has to be defined in the "Log Settings Page".

### Send Trap Message:

**This type of action appears and can be configured only if you already have specified at least a destination SNMP Server (General/SNMP Tab).**

Check this/these box(es) and specify one or two SNMP addresses in the corresponding field if you want to send SNMP messages to one or two SNMP Servers.

### Mail to:

**This type of action appears and can be configured only if you already have created a destination SMTP Server (General/SMTP Tab).**

Check this/these box(es) and specify one or two e-mail address(es) in the corresponding field if you want to send an e-mail to one or two specific user(s). To send e-mails, you will need a SMTP server on the network and you will have to configure its parameters in the "SMTP Page".

### Syslog / Trap / Mail Message:

**This field appears only if you already have configured at least one destination Syslog Server (Misc/Log Settings Page) or a destination SMTP Server (General/SMTP Page).**

Up to 255 characters may be entered in this free text field. The text will appear in the Syslog, the Trap and the e-mails.

### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.9.2. Settings / Rules / Ping Monitoring Rule

This rule can be used to check if a computer or any IP device is connected to the network. It sends ping packets and listens for replies from the specific host. If the host doesn't reply, the ServMon xB can automatically switch the powered device off and after a specified delay, switch it again on (for details see Ping & Scan Method).

The screenshot shows the 'ServMon xB' web interface. At the top, there's a navigation bar with 'General', 'Settings', 'Misc', and 'Help'. Below that, a sub-navigation bar includes 'Accounts', 'Groups', 'Peripherals', and 'Rules'. The main content area is titled 'Add a New Monitoring Rule'. It contains several input fields and checkboxes:

- Rule ID:** A text input field with 'R8' entered.
- Rule Name:** An empty text input field.
- Rule Color:** A color selection bar showing a yellow color.
- Rule Type:** A dropdown menu with 'Ping Monitoring Rule' selected.
- IP Device to monitor:** A text input field with '0.0.0.0' entered.
- Wait Time for Answer:** A numeric input field with '0' and a 'sec' unit.
- Interval between Requests:** A numeric input field with '0' and a 'sec' unit.
- Number of unsuccessful Requests before Action:** A numeric input field with '0'.
- Delay before First Request after execution of the Rule:** A numeric input field with '0' and a 'sec' unit.
- Set Group:** A checkbox followed by a dropdown menu.
- Set Power Outlet:** A checkbox followed by a dropdown menu.
- Mail to:** A checkbox followed by a text input field.
- Type of Action:** A checkbox followed by a dropdown menu.

At the bottom of the form, there are three buttons: 'LOGOUT', 'DISCARD CHANGES', and 'APPLY CHANGES'.

#### Rule ID:

The ServMon xB automatically creates an ID Code to clearly identify each rule. All the ID Codes used to identify rules start with the letter "R" followed by a number from 1 to 255. If you delete a rule in the middle of the Rule list, the number of this rule will only be used again if no other rule is available.

#### Rule Name:

In this field, enter the name you want to give to the rule. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Rule Color:

In this field, select one of the 48 standard colours you want to use to highlight the rule when executed. To use own colours, just type in the Hex value of the colour you want. The Rule highlighting allows to quickly identify the triggered rule when displayed in the Rule Panel page or in a special users page.

#### Rule Type:

In this drop-down list, choose Ping Monitoring Rule then configure the event and the actions to perform.

### Configuring the Event

#### IP device to monitor:

In this field enter the IP address of the IP device that you want to monitor using the Ping command.

#### Wait Time for Answer:

In this field, define the delay in seconds for the Answer Timeout.

The delay can be set between 1 and 10 seconds.

#### Interval between Requests:

In this field, define the delay in seconds between ping commands sent to the IP device to monitor.

The delay can set between 30 and 65535 seconds.

**Number of unsuccessful Requests before Action:**

In this field, define the number of Ping commands to be sent to the IP device before executing the actions. The number can be set between 1 and 65535 seconds.

**Delay before First Request after Power up:**

In this field, define the time in seconds before restarting the monitoring after the reboot action. The delay can be set between 30 and 65535 seconds.

**Configuring the Actions:**

For the Event defined above, you can choose and configure following actions:

**Set Group:**

This type of action appears and can be configured only if you already have created at least one group (Settings/Groups Tab).

Check this box and in the corresponding drop-down list choose the power outlet group the rule will apply to. In the next corresponding drop-down list, choose the action to execute.

Each power outlet group can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

- If you choose 0 second for the delay, the delay will be the delay defined in the "Power Outlets Page".

- If you choose a delay different from 0, it will replace the delay defined in the "Power outlets page".

**Set Power Outlet:**

Check this box and in the corresponding drop-down list, choose the power outlet the rule will apply to. In the next corresponding drop-down list, choose the action to execute. Each power outlet can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

**Send Syslog Message:**

This type of action appears and can be configured only if you already have created at least one destination Syslog Server (Misc/Log Settings Tab).

Check this box if you want to send a message to a Syslog server. In the following drop-down lists choose the facility and the severity of the message to send. The address of the Syslog server has to be defined in the "Log Settings Page".

**Send Trap Message**

This type of action appears and can be configured only if you already have specified at least a destination SNMP Server (General/SNMP Tab).

Check this/these box(es) and specify one or two SNMP addresses in the corresponding field if you want to send SNMP messages to one or two SNMP Servers.

**Mail to:**

This type of action appears and can be configured only if you already have created a destination SMTP Server (General/SMTP Tab).

Check this/these box(es) and specify one or two e-mail address(es) in the corresponding field if you want to send an e-mail to one or two specific user(s). To send e-mails, you will need a SMTP server on the network and you will have to configure its parameters in the "SMTP Page".

**Syslog / Trap / Mail Message**

This field appears only if you already have configured at least one destination Syslog Server (Misc/Log Settings Page) or a destination SMTP Server (General/SMTP Page).

Up to 255 characters may be entered in this free text field. The text will appear in the Syslog, the Trap and the e-mails.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

Note

Note

Note

Note

### 3.3.9.3. Settings / Rules / Scan Monitoring Rule

This rule can be used to check if a specific protocol is available on a server (for example HTTP, FTP, Telnet, SMTP, POP...). If the connection is possible, ServMon xB knows that a server program is running there. If the connection is not possible, ServMon xB can automatically switch the powered device off and, after a specified delay, switch it again on (for details see Ping & Scan Method).

#### Rule ID:

The ServMon xB automatically creates an ID Code to clearly identify each rule. All the ID Codes used to identify rules start with the letter "R" followed by a number from 1 to 255. If you delete a rule in the middle of the Rule list, the number of this rule will only be used again if no other rule is available.

#### Rule Name:

In this field, enter the name you want to give to the rule. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Rule Color:

In this field, select one of the 48 standard colours you want to use to highlight the rule when executed. To use own colours, just type in the Hex value of the colour you want. The Rule highlighting allows to quickly identify the triggered rule when displayed in the Rule Panel page or in a special users page.

#### Rule Type:

In this drop-down list, choose Scan Monitoring Rule then configure the event and the actions to perform.

### Configuring the Event

#### IP device to monitor:

In this field, enter the IP address of the IP device that you want to monitor using the Scan command. In the "Port to scan" field, enter the port number you want to monitor. The value can be set between 1 and 65535.

#### Wait Time for Answer:

In this field, define the delay in seconds for the Answer Timeout. The delay can be set between 1 and 10 seconds.



**Interval between Requests:**

In this field, define the delay between the scan commands sent to the IP device.

The delay can be set between 30 and 65535 seconds.

**Number of unsuccessful Scan Commands before Action:**

In this field, define the number of Port scanning commands to be sent to the IP device before executing the actions.

The number can be set between 1 and 65535 seconds.

**Delay before First Request after Power Up:**

In this field, define the time in seconds before restarting the monitoring after the reboot action.

The delay can be set between 30 and 65535 seconds.

**Configuring the Actions**

For the Event defined above, you can choose and configure following actions:

**Set Group**

**This type of action appears and can be configured only if you already have created at least one group (Settings/Groups Tab).**

Check this box and in the corresponding drop-down list choose the power outlet group the rule will apply to. In the next corresponding drop-down list, choose the action to execute.

Each power outlet group can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

- If you choose 0 second for the delay, the delay will be the delay defined in the "Power Outlets Page".

- If you choose a delay different from 0, it will replace the delay defined in the "Power Outlets Page".

**Set Power Outlet:**

Check this box and in the corresponding drop-down list, choose the power outlet the rule will apply to. In the next corresponding drop-down list, choose the action to execute. Each power outlet can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

**Send Syslog Message:**

**This type of action appears and can be configured only if you already have created at least one destination Syslog Server (Misc/Log Settings Tab).**

Check this box if you want to send a message to a Syslog server. In the following drop-down lists choose the facility and the severity of the message to send. The address of the Syslog server has to be defined in the "Log Settings Page".

**Send Trap Message:**

**This type of action appears and can be configured only if you already have specified at least a destination SNMP Server (General/SNMP Tab).**

Check this/these box(es) and specify one or two SNMP addresses in the corresponding field if you want to send SNMP messages to one or two SNMP Servers.

**Mail to:**

**This type of action appears and can be configured only if you already have created a destination SMTP Server (General/SMTP Tab).**

Check this/these box(es) and specify one or two e-mail address(es) in the corresponding field if you want to send an e-mail to one or two specific user(s). To send e-mails, you will need a SMTP server on the network and you will have to configure its parameters in the "SMTP Page".

**Syslog / Trap / Mail Message:**

**This field appears only if you already have configured at least one destination Syslog Server (Misc/Log Settings Page) or a destination SMTP Server (General/SMTP Page).**

Up to 255 characters may be entered in this free text field. The text will appear in the Syslog, the Trap and the e-mails.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.9.4. Settings / Rules / Power Supply Monitoring Rule

This rule can be used to monitor the status of the 2 power supplies of the ServMon xB and the power supplies of connected peripherals like Power Switches and Digital Input Modules.

**BLACK BOX**  
NETWORK SERVICES

**ServMon xB**

General Settings Misc Help

Accounts Groups Peripherals Rules

**Add a New Monitoring Rule**

Rule ID: RS

Rule Name:

Rule Color: Yellow

Rule Type: Power Supply Monitoring Rule

Power Input to monitor: EM50: ServMon xB

PWA: Power Input A Name

Action if Power Supply ...: Fault

☐ Set Group: to

☐ Set Power Outlet: to

☐ Mail to:

Type of Action:

☐ Email / Trip / Mail Message (max. 255 characters)

LOGOUT DISCARD CHANGES APPLY CHANGES

#### Rule ID:

The ServMon xB automatically creates an ID Code to clearly identify each rule. All the ID Codes used to identify rules start with the letter "R" followed by a number from 1 to 255. If you delete a rule in the middle of the Rule list, the number of this rule will only be used again if no other rule is available.

#### Rule Name:

In this field, enter the name you want to give to the rule. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Rule Color:

In this field, select one of the 48 standard colours you want to use to highlight the rule when executed. To use own colours, just type in the Hex value of the colour you want. The Rule highlighting allows to quickly identify the triggered rule when displayed in the Rule Panel page or in a special users page.

#### Rule Type:

In this drop-down list, choose Power Supply Monitoring Rule then configure the event and the actions to perform.

## Configuring the Event

### Power Input to monitor:

In the first Drop-Down list choose the device for which you want to monitor the power supplies. Each device name is preceded by the ID Code of the device.

- EMS0 for the ServMon xB.
- S1 to S16 for the Power Switch units.
- TA1 to TA32 for the sensors.
- DIM1 to DIM16 for Digital Input Modules.
- CP1 to CP16 for the Current Probes.

A character between brackets can follow this ID Code:

- The "X" character means that the corresponding peripheral is physically not connected.
  - The "!" character means that the corresponding peripheral is physically connected but not activated. If you want to activate it, go to the "Settings/Power Outlets" tab.
  - The " " character (blank) means that the corresponding satellite is physically connected and activated.
- In the second Drop-Down list, choose the power input (Input A or Input B) you wish to monitor.

### Action if power supply...:

In this Drop-Down list, choose if the action has to be executed on power on or power failure.

## Configuring the Actions

For the Event defined above, you can choose and configure following actions:

### Set Group:

**This type of action appears and can be configured only if you already have created at least one group (Settings/Groups Tab).**

Check this box and in the corresponding drop-down list choose the power outlet group the rule will apply to. In the next corresponding drop-down list, choose the action to execute.

Each power outlet group can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

- If you choose 0 second for the delay, the delay will be the delay defined in the "Power Outlets Page".
- If you choose a delay different from 0, the delay will replace the delay defined in the "Power Outlets Page".

### Set Power Outlet:

Check this box and in the corresponding drop-down list, choose the power outlet the rule will apply to. In the next corresponding drop-down list, choose the action to execute. Each power outlet can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

### Send Syslog Message:

**This type of action appears and can be configured only if you already have created at least one destination Syslog Server (Misc/Log Settings Tab).**

Check this box if you want to send a message to a Syslog server. In the following drop-down lists choose the facility and the severity of the message to send. The address of the Syslog server has to be defined in the "Log Settings Page".

### Send Trap Message:

**This type of action appears and can be configured only if you already have specified at least a destination SNMP Server (General/SNMP Tab).**

Check this/these box(es) and specify one or two SNMP addresses in the corresponding field if you want to send SNMP messages to one or two SNMP Servers.

### Mail to:

**This type of action appears and can be configured only if you already have created a destination SMTP Server (General/SMTP Tab).**

Check this/these box(es) and specify one or two e-mail address(es) in the corresponding field if you want to send an e-mail to one or two specific user(s). To send e-mails, you will need a SMTP server on the network and you will have to configure its parameters in the "SMTP Page".

### Syslog / Trap / Mail Message:

**This field appears only if you already have configured at least one destination Syslog Server (Misc/Log Settings Page) or a destination SMTP Server (General/SMTP Page).**

Up to 255 characters may be entered in this free text field. The text will appear in the Syslog, the Trap and the e-mails.

Note

Note

Note

Note

Note

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.9.5. Settings / Rules / Digital Input Monitoring Rule

This rule can be used to monitor the status of an electrical contact (a door contact, a smoke contact, a proximity sensor, a push button) and to initiate different actions if the contact status has changed.

The screenshot shows the 'Add a New Monitoring Rule' form in the ServMon xB web interface. The form includes the following fields and options:

- Rule ID:** A text input field containing 'R8'.
- Rule Name:** An empty text input field.
- Rule Color:** A yellow color selection bar.
- Rule Type:** A dropdown menu set to 'Digital Input Monitoring Rule'.
- Digital Input to monitor:** A dropdown menu set to 'EMS0: ServMon xB'.
- DI1: Digital Input 1 Name:** A dropdown menu set to 'Open'.
- Action if Digital Input switch to ...:** A dropdown menu set to 'Open'.
- Type of Action:** A section with checkboxes for:
  - ☐ Set Group: A dropdown menu set to 'Set Group' and a 'to' dropdown menu.
  - ☐ Set Window Outlet: A dropdown menu set to 'Set Window Outlet' and a 'to' dropdown menu.
  - ☐ Mail to: An empty text input field.
  - ☐ Mail to: An empty text input field.
  - ☐ Syslog / Trap / Mail Message (max 255 characters): A large text area.

At the bottom of the form, there are three buttons: 'LOGOUT', 'DISCARD CHANGES', and 'APPLY CHANGES'.

#### Rule ID:

The ServMon xB automatically creates an ID Code to clearly identify each rule. All the ID Codes used to identify rules start with the letter "R" followed by a number from 1 to 255. If you delete a rule in the middle of the Rule list, the number of this rule will only be used again if no other rule is available.

#### Rule Name:

In this field, enter the name you want to give to the rule. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Rule Color:

In this field, select one of the 48 standard colours you want to use to highlight the rule when executed. To use own colours, just type in the Hex value of the colour you want. The Rule highlighting allows to quickly identify the triggered rule when displayed in the Rule Panel page or in a special users page.

#### Rule Type:

In this drop-down list, choose Digital Input Monitoring Rule then configure the event and the actions to perform.

### Configuring the Event

#### Digital Input to monitor:

In the first drop-down list, choose the device you want to monitor:

- EMS0 for ServMon xB,
- TP followed by a number for a Proximity Sensor,
- DIM followed by a number for a Digital Input Module,
- PB followed by a number for a Push Button.

In the second drop-down list, choose the Input you want to monitor. The ServMon xB uses ID Codes to clearly identify each Input:

- DI1 to DI4 for the digital inputs of the ServMon xB,
- PS followed by a number for a proximity input,
- DI followed by a number for all digital input of a DIM module,
- SP followed by a number for a short push on the push button,
- LP followed by a number for a long push on the push button.

**Action if contact...:**

In this Drop-Down list choose if the action has to be executed when:

- a contact opens or closes,
- when a push button is used (long push or short push),
- when the proximity sensor detects a presence.

## Configuring the Actions

For the Event defined above, you can choose and configure following actions:

**Set Group:**

This type of action appears and can be configured only if you already have created at least one group (Settings/Groups Tab).

Check this box and in the corresponding drop-down list choose the power outlet group the rule will apply to. In the next corresponding drop-down list, choose the action to execute.

Each power outlet group can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

- If you choose 0 second for the delay, the delay will be the delay defined in the "Power Outlets Page".
- If you choose a delay different from 0, the delay will replace the delay defined in the "Power Outlets Page".

**Set Power Outlet:**

Check this box and in the corresponding drop-down list, choose the power outlet the rule will apply to. In the next corresponding drop-down list, choose the action to execute. Each power outlet can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

**Send Syslog Message:**

This type of action appears and can be configured only if you already have created at least one destination Syslog Server (Misc/Log Settings Tab).

Check this box if you want to send a message to a Syslog server. In the following drop-down lists choose the facility and the severity of the message to send. The address of the Syslog server has to be defined in the "Log Settings Page".

**Send Trap Message:**

This type of action appears and can be configured only if you already have specified at least a destination SNMP Server (General/SNMP Tab).

Check this/these box(es) and specify one or two SNMP addresses in the corresponding field if you want to send SNMP messages to one or two SNMP Servers.

**Mail to:**

This type of action appears and can be configured only if you already have created a destination SMTP Server (General/SMTP Tab).

Check this/these box(es) and specify one or two e-mail address(es) in the corresponding field if you want to send an e-mail to one or two specific user(s). To send e-mails, you will need a SMTP server on the network and you will have to configure its parameters in the "SMTP Page".

**Syslog / Trap / Mail Message:**

This field appears only if you already have configured at least one destination Syslog Server (Misc/Log Settings Page) or a destination SMTP Server (General/SMTP Page).

Up to 255 characters may be entered in this free text field. The text will appear in the Syslog, the Trap and the e-mails.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.

### 3.3.9.6. Settings / Rules / Analog Input Monitoring Rule

This rule can be used to monitor an Analog Input value (temperature, humidity, ambient light, current...) and perform actions when the predefined value is exceeded.

The screenshot shows the 'Add a New Monitoring Rule' form in the ServMon xB web interface. The form is titled 'Add a New Monitoring Rule' and includes a red '2' icon in the top right corner. The form fields are as follows:

- Rule ID:** A text input field containing 'R8'.
- Rule Name:** A text input field.
- Rule Color:** A color selection field showing a yellow color.
- Rule Type:** A dropdown menu with 'Analog Input Monitoring Rule' selected.
- Analog Input to monitor:** A dropdown menu with 'S2: Secure Power Switch - 32 /amp' selected.
- Action if...:** Two radio buttons: 'Lower than' (selected) and 'Higher than'. The 'Lower than' option has a value of '8' and a unit of 'A'.
- Set Group:** A checkbox with a dropdown menu showing 'S2: Secure Power Switch - 32 /amp' and a 'to' dropdown menu.
- Set Power Outlet:** A checkbox with a dropdown menu showing 'S2: Secure Power Switch - 32 /amp' and a 'to' dropdown menu.
- Mail to:** A checkbox with a text input field.
- Type of Action:** A checkbox with a dropdown menu showing 'Syslog / Trip / Mail Message (max 255 characters)' and a text input field.

At the bottom of the form, there are three buttons: 'LOGOUT', 'DISCARD CHANGES', and 'APPLY CHANGES'.

#### Rule ID:

The ServMon xB automatically creates an ID Code to clearly identify each rule. All the ID Codes used to identify rules start with the letter "R" followed by a number from 1 to 255. If you delete a rule in the middle of the Rule list, the number of this rule will only be used again if no other rule is available.

#### Rule Name:

In this field, enter the name you want to give to the rule. The name can be from 1 to 32 characters long, and can contain alphanumeric characters.

#### Rule Color:

In this field, select one of the 48 standard colours you want to use to highlight the rule when executed. To use own colours, just type in the Hex value of the colour you want. The Rule highlighting allows to quickly identify the triggered rule when displayed in the Rule Panel page or in a special users page.

#### Rule Type:

In this drop-down list, choose Analog Input Monitoring Rule then configure the event and the actions to perform.

## Configuring the Event

### Analog Input to monitor:

Choose in the first Drop-Down list the device you want to monitor.

The ServMon xB supports:

- up to 32 temperature, humidity and ambient light sensors,
- up to 16 current probes,
- up to 16 EnergyMeter,
- up to 16 Power Switch Satellite 8-port 32 A.

Each device name, which can be defined by the administrator (go to Settings/Sensors Tab), is preceded by the ID Code of the device. For example, all ID Codes used to identify temperature sensors start with the character "T" followed by a number.

A character between brackets can follow this ID Code:

- The "X" character means that the corresponding sensor is physically not connected.
- The "!" character means that the corresponding sensor is physically connected but not activated. If you want to activate it, go to the "Settings/Power Outlets" tab.
- The " " character (blank) means that the corresponding sensor is physically connected and activated.

According to the device you use, choose the Analog Input in the second Drop-Down (temperature, humidity, light, current, energy...).

### Action Condition:

The options "higher than" and "lower than" enable you to define when the rule has to be executed.

- Choose "higher than" if you want to execute the rule when the environment value exceeds the value you defined in the field on the right of "higher than".
- Choose "lower than" if you want to execute the rule when the environment value is below the value you defined in the field on the right of "lower than".

For temperature, you can define values between -25°C and 60°C, +/- 2°C.

For relative humidity, you can define values between 20 RH and 80 RH, +/- 3%.

For ambient light, you can define values between 0 and 1000 Lux.

For the effective current (rms), you can define values between 1 and 10 Amps.

## Configuring the Actions

For the Event defined above, you can choose and configure the following actions:

### Set Group:

**This type of action appears and can be configured only if you already have created at least one group (Settings/Groups Tab).**

Check this box and in the corresponding drop-down list choose the power outlet group the rule will apply to. In the next corresponding drop-down list, choose the action to execute.

Each power outlet group can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

- If you choose 0 second for the delay, the delay will be the delay defined in the "Power Outlets Page".
- If you choose a delay different from 0, the delay will replace the delay defined in the "Power Outlets Page".

### Set Power Outlet:

Check this box and in the corresponding drop-down list choose the power outlet the rule will apply to. In the next corresponding drop-down list, choose the action to execute. Each power outlet can be switched On/Off and restarted. If you choose "restart" you will also be able to define a restart delay between 0 and 65535 seconds.

### Send Syslog Messages:

**This type of action appears and can be configured only if you already have created at least one destination Syslog Server (Misc/Log Settings Tab).**

Check this box if you want to send a message to a Syslog server. In the following drop-down list chose the facility and the severity of the message to send. The address of the Syslog server has to be defined in the "Log Settings Page".

### Send Trap Message:

**This type of action appears and can be configured only if you already have specified at least a destination SNMP Server (General/SNMP Tab).**

Check this/these box(es) and specify one or two SNMP addresses in the corresponding field if you want to send SNMP messages to one or two SNMP Servers.



**Mail to:**

This type of action appears and can be configured only if you already have created a destination SMTP Server (General/SMTP Tab).

Check this/these box(es) and specify one or two e-mail address(es) in the corresponding field if you want to send an e-mail to one or two specific user(s). To send e-mails, you will need a SMTP server on the network and you will have to configure its parameters in the "SMTP Page".

**Syslog / Trap / Mail Message:**

This field appears only if you already have configured at least one destination Syslog Server (Misc/Log Settings Page) or a destination SMTP Server (General/SMTP Page).

Up to 255 characters may be entered in this free text field. The text will appear in the Syslog, the Trap and the e-mails.

**LOGOUT:**

Click "Logout" at the bottom of the page to exit the session without saving changes.

**DISCARD CHANGES:**


Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.

**APPLY CHANGES:**

Click "Apply Changes" at the bottom of the page to save changes.


### 3.3.10. Misc / Control Panel

This page is very helpful for the administrator because it gives a complete overview of all the peripherals which are currently connected or have been connected to the ServMon xB. At a glance, the administrator can check the status of the power supplies of the ServMon xB and the connected Peripherals. He can also check the values of the connected sensors, check the status of the connected dry contacts and of course control all the Power Outlets of the connected Power Switch units.

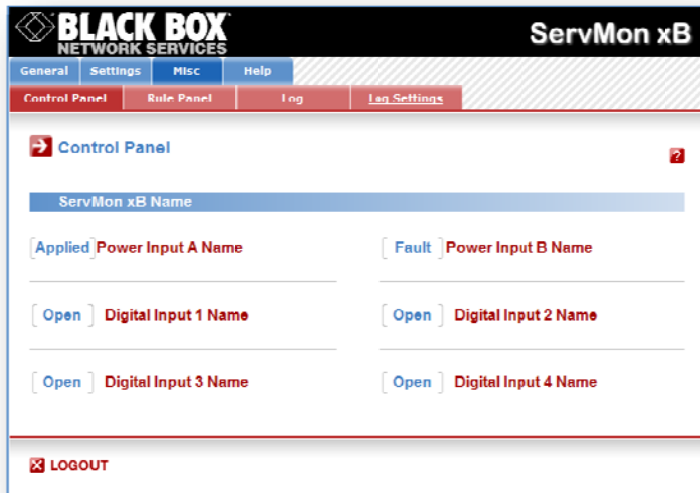


### 3.3.11. Misc / Rule Panel

This page shows all the rules the administrator has created and activated. The rules which have been executed can also be highlighted in different colours according to the emergency of the action. The highlight colours can be customized during the creation of the rule (Settings/Rules Page).

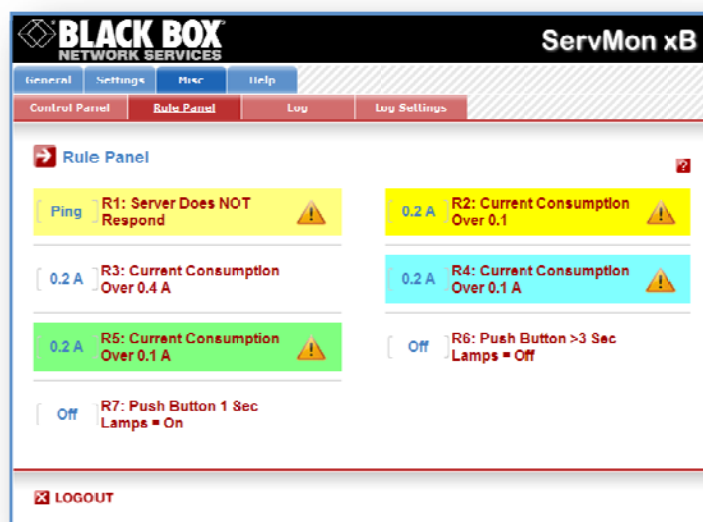

For supervision purpose, the administrator can create special accounts which display only some specific rules. In the example below, the user Bill has the possibility to supervise 4 rules and to see on a glance the rules which have been triggered.

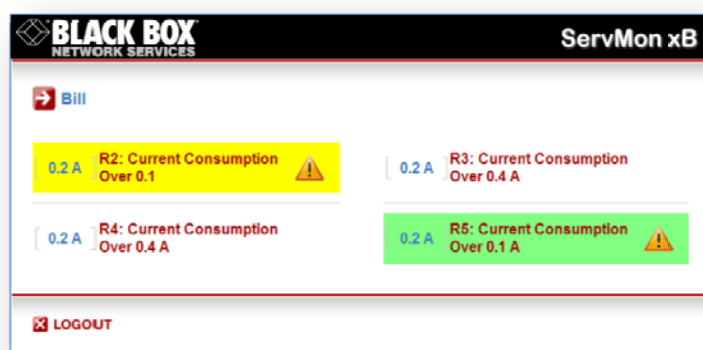


The page is automatically refreshed every 10 seconds.

Unlike a standard session, the web server of the ServMon xB won't automatically close this kind of session. Opening many sessions of this affects the performances of the web server.

### 3.3.12. Misc / Log

The log file keeps a running log of events and activities occurring on the device. The logs are automatically cleared when the device is rebooted. The file will display up to 2048 recent logs.

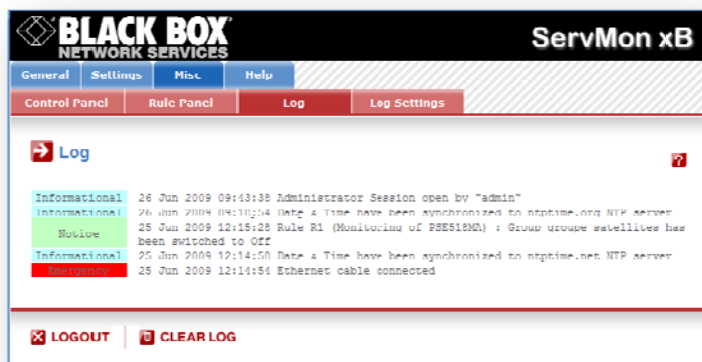

### 3.3.13. Misc / Log Settings

This page allows you to configure the logs. The Log file is used by the system to record actions, warnings, errors and problems. It is often quite useful to discover the causes of tricky problems. The messages recorded in the log file and sent as copy to a Syslog server are classified into 8 severity levels (Emergency, Alert, Critical, Error, Warning, Notice, Informational and Debug).

#### Primary Syslog Server:

If you want to enable the ServMon xB to send messages to a Syslog Server, check the box "Syslog Server Address" and enter the address of the Syslog Server you wish to use. You can enter either the hostname or the IP address of a Syslog server. The Syslog uses port 443/UDP.

#### Secondary Syslog Server:

In this field you can define the IP Address of a secondary Syslog Server.

Example: syslog.ServMon xB.com or 192.168.1.252

#### Email Address:

If you want to enable the ServMon xB to send e-mails, check the box "e-mail address" and specify the destination e-mail address to be used.

#### Type of messages to send:

Specify in this field the type of messages you want to send to the specified e-mail address. (for details see Syslog Messages: Severity Level definition).

#### LOGOUT:

Click "Logout" at the bottom of the page to exit the session without saving changes.

#### DISCARD CHANGES:

Click "Discard Changes" at the bottom of the page to discard all the changes you have made on this page.


#### APPLY CHANGES:

Click "Apply Changes" at the bottom of the page to save changes.


## 4. POWER OUTLET CONTROL AND PERIPHERALS STATUS


Start your Web browser and type the IP address of your ServMon xB. The browser displays the authentication dialog box.

Enter a user name and its corresponding password. The status of the ServMon xB is displayed.

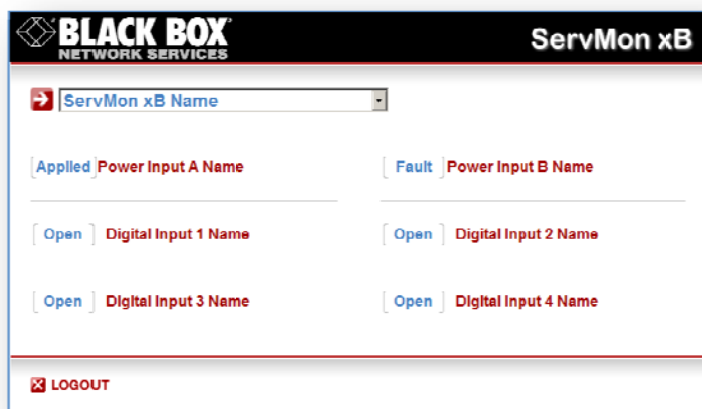

In the drop-down list, choose the power control unit you want to control or the peripheral for which you want to know the status.

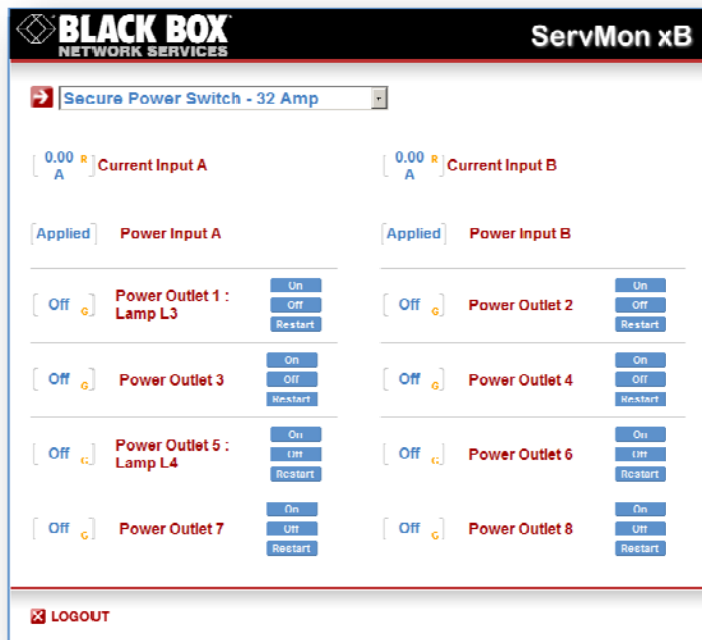

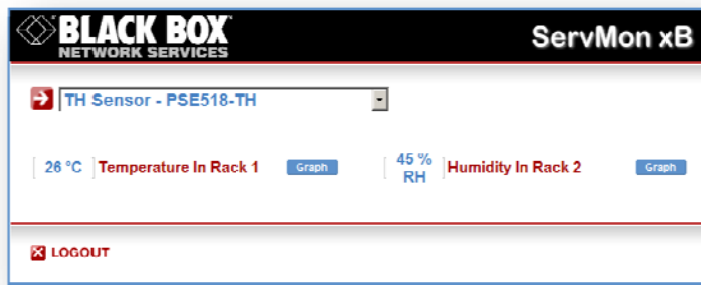

If you log in as system administrator, you will be able to:

- control all the power outlets and all the power outlet groups of the connected Power Switch devices,
- display the instant values of all the connected sensors (temperature, humidity, ambient light),
- display the status of all digital inputs.

If you log in as a user (ServMon xB handles up to 255 accounts), you will be able to:

- control individually all the power outlets and all the power outlet groups for which you have the rights,
- display the values of all the connected sensors for which you have the rights,
- display the status of all the digital inputs for which you have the rights.

The ON button allows you to switch ON the corresponding power outlet or group of power outlets.

The OFF button allows you to switch OFF the corresponding power outlet or group of power outlets.

The RESTART button allows you to switch OFF the corresponding power outlet or group of power outlets.

The power outlet or group of power outlets will then be automatically switched ON after the delay defined by the administrator (see Settings / power outlets Page).

## 5. ANNEXES

### 5.1. Ping and Scan Methods

ServMon xB has two methods to check whether an IP equipment (PC, server, router, Webcam...) is still alive:

#### Address Pinging:

The first method uses the well-known Ping command whereby a request is sent to a specific IP address. The Ping command, which is an echo request, enables you to determine through an ICMP protocol (Internet Control Message Protocol) if an IP device is available on the network. If the system reacts to this request, ServMon xB knows that the TCP/IP connection is established. If the system does not react to one or several requests, ServMon xB can automatically switch the device off and after a specified delay switch it again on (Reboot function).

#### Port Scanning:

The second method uses the Port Scan command to test a specific TCP/IP port. In other words, this command allows you to find out if a specific protocol is available on a server (for example HTTP, FTP, Telnet, SMTP, POP...). ServMon xB simply tries to connect to a specific server port. If the connection is possible, ServMon xB knows that a server program is running there. If the connection is not possible, ServMon xB can automatically switch the device off and after a specified delay switch it again on (Reboot function).

- The Supervision function works only if the ServMon xB is connected to the LAN.
- The Ping and Scan functions can be used separately or together.
- The network route between ServMon xB and the IP device you wish to supervise should be as direct as possible, so do not use unnecessary routers and complex wiring between them.  
A problem on a router or the wiring could reboot the IP device to supervise.
- Execute several Pings and/or Scans before running the Reboot function. It could be possible that the IP device doesn't respond although it is still working.
- Choose a realistic supervision cycle. One second is possible, however it's not necessary to overload the network with Ping and Scan requests.

#### Recommended values:

- Interval between Requests: 10 sec or more
- Number of unsuccessful Requests before Reboot: 3 or more
- Delay before Reboot: 10 sec or more
- Delay before restarting monitoring after Reboot: 120 sec or more





## 5.2. Technical Data

**Network standards:**

IEEE 802.3, 10 / 100 BASE-T

**Network protocols:**

TCP/IP, HTTP/HTTPS

**Network connection:**

RJ-45 connector for STP CAT5

Max. network cable length 100 meters

**Serial connection:**

RS232, SUB-D 9 female

**SSL Technology:**

Version 2 and 3

**Operating temperature:**

0°C to +40°C

**Operating humidity:**

10% to 80% RH (not condensing)

**Dimensions (LxDxH):**

170 x 110 x 42 mm

**Weight:**

0,63 kg

**Approvals:**

CE, EN55022 & EN55024

## 5.3. Commonly used Ports

- TCP 25:** This port is used to deliver e-mails over SMTP (Simple Mail Transfer Protocol).
- TCP 80:** This port is used for http connections.
- UDP 123:** This port is used to allow time synchronization over NTP (Network Time Protocol).
- UDP 161:** This port is used for SNMP Requests.
- UDP 162:** This port is used for SNMP Traps.
- TCP 443:** This port is used to allow SSL support (Secure Socket Layer).
- UDP 514:** This port is used to deliver Syslog messages.

## 5.4. Syslog Messages: Severity Level Definitions

The Emergency level is the most severe type of message generated by ServMon xB and the Debug severity level is the least severe one.

### Severity Level 0, Emergency:

The following messages appear at severity 0:

- Continuous error!
- An SMTP Client could not be created

### Severity Level 1, Alert:

The following messages appear at severity 1:

- Settings have been reinitialized through the serial connection
- ServMon xB does not respond
- Satellite "number" does not respond
- Sensor "number" does not respond
- Failure on Power Input A of Master M0
- Failure on Power Input B of Master M0
- Failure on auxiliary Power Input of Master M0
- Failure on Power Input A of Satellite (number)
- Failure on Power Input B of Satellite (number)
- I/O Extension Module has been disconnected
- A Mail could not be sent "subject" to "name"
- SMTP Client not available: a Mail could not be sent "subject" to "name"

### Severity Level 2, Critical:

The following messages appear at severity 2:

- "file" config corrupted : restoring default values

### Severity Level 3, Error:

ServMon xB doesn't generate Severity Level 3.

### Severity Level 4, Warning:

The following messages appear at severity 4:

- Settings have been changed through the serial connection
- Settings have been changed through the network by User "name"

### Severity Level 5, Notice:

The following messages appear at severity 5:

- Master M0 has been connected
- Satellite (number) has been connected
- Sensor (number) has been connected
- SSL Key has been reinitialized through the serial connection
- System has been restarted through the serial connection
- Power Supply A of Master restored
- Power Supply B of Master restored
- Auxiliary Power Supply of Master restored
- Power Supply A of Satellite (number) restored
- Power Supply B of Satellite (number) restored
- I/O Extension Module has been connected
- Rule (number) : Outlet (number) of Master has been switched ON
- Rule (number) : Group (number) has been switched ON
- Rule (number) : Dry Contact Output (number) has been open
- Rule (number) : Mail "subject" has been sent to "name"

**Severity Level 6, Informational:**

The following messages appear at severity 6:

- System has been started
- Date & Time have been synchronized to a Network Time Server
- User "name" : Outlet (number) of Master M0 has been switched ON
- User "name" : Group (number) has been switched ON
- Dry Contact Input (number) has been opened
- Dry Contact Input (number) has been closed
- Dry Contact Output (number) has been opened
- Dry Contact Output (number) has been closed
- Mail "subject" has been sent to "name"
- Session opened by user "name"

**Severity Level 7, Debug:**

ServMon xB doesn't generate Severity Level 7.

All modifications reserved